

## COMPRESSOR UNIT

### Instruction Manual

**C30PMVRT-E1**

#### Export Control Policy

Vacuum pumps that pump nitrogen gas at pumping speed of 15000L/S or more fall under row 2(35) of appended table 1 of Japan's Export Trade Control Order, which is based on international export control regimes. Customers must follow all related rules and regulations such as Foreign Exchange and Foreign Trade Act and take appropriate procedures when exporting or re-exporting those products.



## Introduction

Thank you for choosing our products. This instruction manual provides information and precautions on handling, installation, operation, and maintenance of the product.

To ensure proper use of the product, read this instruction manual carefully and keep this manual close at hand so that you can use for reference during operation.

If you have purchased other devices from us, read relevant instruction manuals carefully as well.

### 1. About the personnel who are involved in handling our products

All personnel involved in handling our products should take general safety training which is officially accepted in the country or region where the product is used. Such personnel are also required to have specialized knowledge, skills or qualifications on electricity, machinery, cargo handling or vacuum. Especially, the personnel should be familiar with handling a cryopump in order to use it safely. We offer training program (paid service) as needed for the customers who are not familiar with the use of cryopumps. Please contact us to join the program.

### 2. Warranty

#### 2.1 Gratis warranty period and Warranty coverage

##### 【Gratis warranty period】

The period of less than one year after installation in your company or your customer's premises, or a period of less than 18 months (starting from the shipment date) after shipment from ULVAC CRYOGENICS INCORPORATED (hereinafter "UCI"), which is shorter, is selected.

##### 【Coverage】

#### (1) Failure diagnosis

As a general rule, first diagnosis of failure should be done on site by customer.

However, UCI or our service network can perform this service for an agreed fee upon the customer's request. There will be no charge if the cause of the breakdown is attributed to UCI.

(2) Damage during transportation

When damage by transportation is observed at the time of delivery, the product will be repaired without charge based on the scope of the guarantee expressed in the sales contract.

(3) Breakdown repairs

The cost of repairs, replacements and on-site visits for the failures caused by the reasons as follows shall be borne by the customer regardless the product is within the warranty period.

- ① Inappropriate storage or handling, careless accident, software or hardware design by the customer.
- ② Modifications of the product without consent of UCI.
- ③ Performing maintenance of the product using parts or components which are not approved by UCI, or using the product outside the conditions specified for the product.
- ④ Contamination or corrosion occurred during the use by the customer or customer's customer.
- ⑤ Fire, earthquake, flood, lightning or other natural disasters, environmental pollution, salt damage, hazardous gases, irregular voltage, and/or usage of power source other than specified by UCI.
- ⑥ Other reasons which are regarded to be outside the scope of warranty.
- ⑦ Consumables and/or replacement service.

Since the above services are limited inside Japan, diagnosis of failures, etc may not be performed outside of Japan. If you desire the after sale service abroad, please contact ULVAC CRYOGENICS and consult us for details in advance.

## 2.2 Exclusion of opportunity loss from warranty liability

Regardless of the gratis warranty term, compensation to opportunity losses incurred to your company or your customers by failures of ULVAC CRYOGENICS products and compensation for damages to products other than ULVAC CRYOGENICS products and other services are not covered under warranty.

### 2.3 Repair period after production is discontinued

ULVAC CRYOGENICS accepts product repairs for seven years after production of the product is discontinued.

### 3. Service Form

After the products are delivered, please fill out the following information in the blanks. In the event of a fault, please contact us. Refer to SERVICE NETWORK at the end of this book, or visit our web site at [www.ulvac-cryo.com](http://www.ulvac-cryo.com) to locate our business base close by.

Cryopump/Super Trap Model	:	_____
Cryopump/Super Trap Serial No.	:	_____
Refrigerator Model	:	_____
Refrigerator Serial No.	:	_____
Compressor Model	:	_____
Compressor Serial No.	:	_____
Temperature controller/Thermal display Model	:	_____
Temperature controller/Thermal display Serial No.	:	_____
Optional Part Model	:	_____
Optional Part Serial No.	:	_____

### 4. Notes for repair and maintenance requests

We cannot accept your request for repair or maintenance of our products if you refuse to give us information about the presence of the hazardous substance and/or contaminant.

Also, please be aware that we do not accept liability for damages by the contaminant, which might be caused during transportation to our office or the nearest customer support center. To avoid such accident, please pay careful attention to packing of the product

### 5. In case of breakdown and accident

When breakdown or accident occurs, we may ask for keeping the product on site as it is, or sending it back to us to investigate the cause. In addition, you may be asked to provide information on how it progressed in a specific manner or on the

operating condition. When unidentified failure occurs, please contact our Service Engineering Division or the nearest customer support center. Refer to the SERVICE NETWORK at the end of this book or visit our website at [www.ulvac-cryo.com](http://www.ulvac-cryo.com) for our contact information.

## 6. General Precautions

- (1) It is prohibited to duplicate or reprint this instruction manual or any of its parts, disclose or transfer to a third party without written permission from ULVAC CRYOGENICS.
- (2) Information in this document is subject to change without notice along with the specification change or the improvement of the product.
- (3) If you have any questions or comments on this document, please contact us.

## Safety Icons and Texts

Our products have been designed to provide extremely safe and dependable operation when properly used. Following safety icons indicate cautions, warnings or danger that must be observed during normal operation and when servicing them.

**WARNING**

A warning describes safety hazards or unsafe practices which could result in severe injury or loss of life.

**CAUTION**

A caution describes safety hazards or unsafe practices which could result in personal injury or equipment damage.

**Toxic gas or chemicals used.**

There is a risk of severe injury upon contact.

**Corrosive chemicals used.**

There is a risk of severe injury upon contact.

**Flammable gas used.**

There is a danger of fire or burn injury.

**Explosive gas used.**

There is a risk of fire or explosion.

**Hazardous voltage.**

Electric shock may cause severe injury or loss of life.

**Hot heating part present.**

There is a risk of burn injury.

This page intentionally left blank



## Table of Contents

Compressor unit Safety Instructions .....	S-1
Disposal Considerations .....	IW-1
 Section 1 C30PMVRT-E1 Compressor Description	
1.1 Introduction .....	1-1
1.2 Terminology .....	1-2
1.3 Cryopump system documents .....	1-2
1.4 Roles of compressor in cryopump system .....	1-3
1.5 Compressor specifications .....	1-4
1.6 Component descriptions .....	1-6
1.7 CRYO-U® cryopump installation .....	1-11
 Section 2 Considerations before Installation	
2.1 Combination of cryopump and compressor .....	2-1
2.2 Installation environment requirements .....	2-1
2.3 Wiring requirements .....	2-2
2.4 Cooling water requirements .....	2-4
2.5 Length of cables and flexible hoses .....	2-6
2.6 Remote functions .....	2-6
 Section 3 Unpacking and Inspection	
3.1 Compressor contents .....	3-1
3.2 Inspection of the compressor and accessories .....	3-1
3.3 Flexible hoses and specifications .....	3-2
 Section 4 Equipment Installation, Piping, and Wiring	
4.1 Before installation .....	4-1
4.2 Connecting cooling water piping .....	4-2
4.3 Connecting and disconnecting helium flexible hoses .....	4-2
4.4 Cryopump installation .....	4-4
4.5 Electrical connections .....	4-5
4.6 Wire routing for compressor and other equipments .....	4-10
 Section 5 Operation	
5.1 Verification of helium static pressure .....	5-1
5.2 Compressor operation .....	5-2
5.3 Inspection after replacing helium circulation components .....	5-4
5.4 Precautions for when compressor is not in operation .....	5-4
5.5 Maintenance operation for a compressor stopped for a long period .....	5-4

## Table of Contents (Continued)

Section 6 Wiring and Piping Removal and Storage	
6.1 Removal of wiring and piping and displacement of compressor	6-1
6.2 Maintenance in storage	6-2
Section 7 Maintenance	
7.1 Scheduled maintenance	7-1
7.2 Replacement of adsorber	7-1
7.3 Adjusting system helium pressure	7-5
7.4 Regular maintenance of helium lines, cooling water piping, and electrical wiring	7-8
7.5 Maintenance parts	7-9
Section 8 Troubleshooting	
8.1 Problem types	8-1
8.2 Troubleshooting procedures	8-2
8.3 Alarm code descriptions	8-4
Appendix A Operating Log	A-1
Appendix B Combination of C30PMVRT-E1 Compressor and Cryopump	B-1
Appendix C C30PMVRT-E1 Schematic Diagram	C-1
Appendix D Compressor Flow Diagram	D-1

## List of Figures

Figure 1-1	Compressor motor behavior	1-2
Figure 1-2	C30PMVRT-E1 Compressor dimensions	1-4
Figure 1-3	Compressor front view	1-6
Figure 1-4	Compressor rear view	1-7
Figure 1-5	Anchor bolts mounting positions (example)	1-8
Figure 1-6	Cryopump installation with C30PMVRT-E1 compressor	1-11
Figure 2-1	Required space for compressor installation (scale: mm) and levelness	2-2
Figure 2-2	Equipment-side power circuit	2-3
Figure 2-3	Cooling water flow rate, water supply temperature, and water pressure loss	2-5
Figure 2-4	Remote input interface circuit	2-7
Figure 2-5	Remote output interface circuit	2-7
Figure 2-6	Timing chart for Alternate operating mode with two refrigerators	2-10
Figure 2-7	Timing chart for Momentary operating mode with two refrigerators	2-10
Figure 2-8	Signal delay when powered on (In Alternate operating mode)	2-11
Figure 2-9	Signal delay when the time period from a stop to a restart is short (In Alternate operating mode)	2-12
Figure 2-10	Timing chart when a short power interruption occurs (In Momentary operating mode)	2-12

## List of Figures (Continued)

Figure 4-1	Installation procedure	4-1
Figure 4-2	Tighten with hands first	4-3
Figure 4-3	Tighten with two spanners	4-3
Figure 4-4	Connecting and disconnecting helium flexible hoses to compressor and refrigerator	4-3
Figure 4-5	Connections of the compressor and a cryopump (U22HB)	4-4
Figure 4-6	Connecting input power cable connector	4-5
Figure 4-7	Remote connector pin assignments for C30PMVRT-E1	4-6
Figure 4-8	“Momentary operating mode” wiring example for cryopump (U22HB) operation	4-7
Figure 4-9	Connector parts descriptions	4-8
Figure 4-10	Cut length of insulation coating	4-8
Figure 4-11	Fix with set screw	4-8
Figure 4-12	Connecting the compressor, MBDI-2, and MBS-C	4-9
Figure 5-1	Helium static pressure and ambient temperature	5-2
Figure 5-2	Ready for operation	5-3
Figure 5-3	Reversed phase or open phase	5-3
Figure 5-4	Status display during operation	5-3
Figure 7-1	Remove two nuts from the helium gas connectors	7-3
Figure 7-2	Remove all seven screws from the rear panel	7-3
Figure 7-3	Remove the rear panel	7-3
Figure 7-4	Remove self-sealing coupling	7-3
Figure 7-5	Connecting and disconnecting self-sealing coupling with two spanners	7-3
Figure 7-6	Remove adsorber mounting bolt	7-4
Figure 7-7	Slide adsorber outward	7-4
Figure 7-8	Locations of front panel screws and components inside the compressor	7-6
Figure 7-9	Items for adding helium gas to the compressor	7-7
Figure 8-1	Alarm status table	8-1
Figure 8-2	Alarm status code table	8-2
Figure C-1	C30PMVRT-E1 schematic diagram	C-2
Figure D-1	Compressor flow diagram	D-2

## List of Tables

Table 1-1	C30PMVRT-E1 Compressor models .....	1-1
Table 1-2	Timing of the compressor motor frequency .....	1-1
Table 1-3	Compressor weight .....	1-5
Table 1-4	Power supply rating .....	1-5
Table 1-5	Cooling water requirements .....	1-5
Table 1-6	Installation environment and operation requirements .....	1-5
Table 1-7	Electromagnetic environment resistance characteristics .....	1-6
Table 2-1	Input power cable specifications .....	2-2
Table 2-2	Control and signal wire gauges .....	2-3
Table 2-3	Recommended cooling water for compressor .....	2-4
Table 2-4	Standard cables and flexible hoses .....	2-6
Table 2-5	Remote interface specifications .....	2-6
Table 2-6	Remote interface signals .....	2-8
Table 3-1	Carton contents .....	3-1
Table 3-2	Optional parts .....	3-1
Table 3-3	Flexible hose specifications .....	3-2
Table 5-1	Supply line helium pressure during operation .....	5-4
Table 7-1	Scheduled maintenance .....	7-1
Table 7-2	Preparation for adding helium gas .....	7-6
Table 7-3	Maintenance parts .....	7-9
Table 8-1	List of troubleshooting before operation .....	8-2
Table 8-2	List of troubleshooting related to operation .....	8-3
Table A-1	Operating log .....	A-1
Table B-1	Combination of C30PMVRT-E1 compressor and cryopump .....	B-1
Table C-1	Controller setting and connections .....	C-1

## Compressor Unit Safety Instructions

Read this manual and follow these safety guidelines before installing, operating, or servicing the compressor unit.

### 1. Do not Overfill Helium Gas



Our Cryo-U<sup>®</sup> cryopump and Super trap refrigerator systems make a refrigeration cycle by circulating high pressure helium gas. Filling helium gas more than the defined amount does not improve refrigeration capacity appreciably. Instead, if excessive helium gas is filled and pressure becomes higher than appropriate, gas will release from the safety valve and its sheet may become clogged with dust. This may even cause a leak as well as overloading of the compressor motor.

**Do not fill the helium gas more than the defined amount.**

### 2. Adding Helium Gas and Charging Equipment

When charging helium gas or performing helium line decontamination, please read the "Maintenance" section carefully and follow the instruction. Regulators, charging hoses, adopters or other necessary equipment that can be used at the pressure of 2.0MPaG or above are required.

### 3. Do Not Startup/Shutdown Frequently

Do not startup/shutdown the compressor unit frequently.

The number of startup and shutdown of the compressor motor must be less than 6 times per hour and ON or OFF condition must be maintained for at least 3 minutes. Frequent shutdowns and startups may shorten the insulation life of a compressor motor and may lead to failure. When operating multiple refrigerators, startup/shutdown must also be less than 6 times as well.

**Do not attempt to control the temperature of a Super Trap by starting up and shutting down the compressor unit.**

Please contact us when controlling the temperature of super trap is required.

## 4. Disposal of Used Adsorber



Ensure to discharge helium gas and remove either side of the self-sealing couplings from used adsorber before disposing.

When the refrigerator system is not in operation, the helium gas pressure inside the adsorber is as high as the fill pressure of the compressor. Disposing the adsorber with helium gas inside may cause accidents. For example, if the adsorber was thrown in a burner reactor without discharging helium gas by mistake, the inside pressure of the adsorber would rise as the inside temperature rises and it may explode. If the adsorber was pressed with helium gas still inside, it may also cause an explosion. Refer to “Disposal Considerations” for more information.

**Use appropriate charging adaptor to remove helium gas safely.**

## 5. Electrical Wiring Connections



- Power supply voltage must be kept within the allowable range. Applying more than the allowed voltage may damage the equipment.
- Refer to “Section 1 Table1-3 Power supply rating” to install a ground-fault circuit interrupter.
- Grounding conductor (earth wire) must be connected (D class grounding (with the ground resistance of 100Ω)).
- Connect the refrigerator cable and remote cables (signal lines) to the compressor before connecting the compressor to the power supply. These wiring connections must not be done when the compressor is powered on. It could lead to a serious accident such as electric shock and/or damage to the equipment.
- Follow recommended sizes for wires and cables.
- Power lines and signal lines must be wired at least 10cm separate from one another.

## 6. Cooling Water

Water leak may invite electric shock. Ensure there is no water leak from the cooling water piping. If water pressure is too high, water may leak from the cooling water line inside the compressor unit. Adjust and control the cooling water supply pressure to maintain an allowable upper limit (lower than 0.7MpG) indicated in “Section 1 Table 1-4 Cooling water requirements”

If water stain or some products accumulate in the water line inside the heat exchanger, heat exchange effectiveness will be significantly reduced and helium gas temperature will rise, this may shut down the compressor unit.

We employ the cooling water quality management standard of the Japan Refrigeration and Air Conditioning Industry Association as a standard value of water quality for compressor units. Please refer to “Section 2 Table 2-3 Recommended cooling water for compressor”.

## 7. Ambient Conditions of the Compressor Unit

The upper limit of the compressor operating ambient temperature is 35°C. Do not use the compressor in unsuitable environments such as dusty, highly humid environments and/or places that are affected by strong electromagnetic waves. (Refer to “Section 1 Table 1-5 Installation environment and operation requirements” and “Table 1-6 Electromagnetic environment resistance characteristics”). Keep electric terminals free from dust to avoid electrical leakage and/or a short circuit.

## 8. Maintenance Precautions



1. Installation and maintenance of the product must be done by personnel in charge of the equipment or servicing who are familiar with the product structure and risk associated with the operation of the compressor.
2. Input power supply must be shut off before opening the cover of the compressor to avoid the risk of electrical shock.

Also, parts of inside the compressor unit are still hot just after the compressor has been stopped. Wait at least 15 minutes to open the cover to avoid the risk of burns.

9. Contact us immediately when the self-sealing coupling is loosened.

When working with a self-sealing coupling, the connection may be accidentally loosened or loosened by co-rotation. In such cases, the refrigerator may encounter faults due to helium leakage or air invasion, resulting in serious failure such as abnormal noise or refrigerator motor malfunction.

At the time of shipment of our products, we conduct the inspection to ensure the connection of self-sealing coupling is appropriate and paste a sealing sticker. The sealing stickers are added to our refrigerators, compressor units, flexible hoses, branch pipes and straight pipe units.

Contact us when the self-sealing coupling is loosened or removed by accident. Servicing for trouble is out of warranty if it occurs while the sealing sticker is not in the original state. The sealing sticker is located inside the panel of the compressor unit.

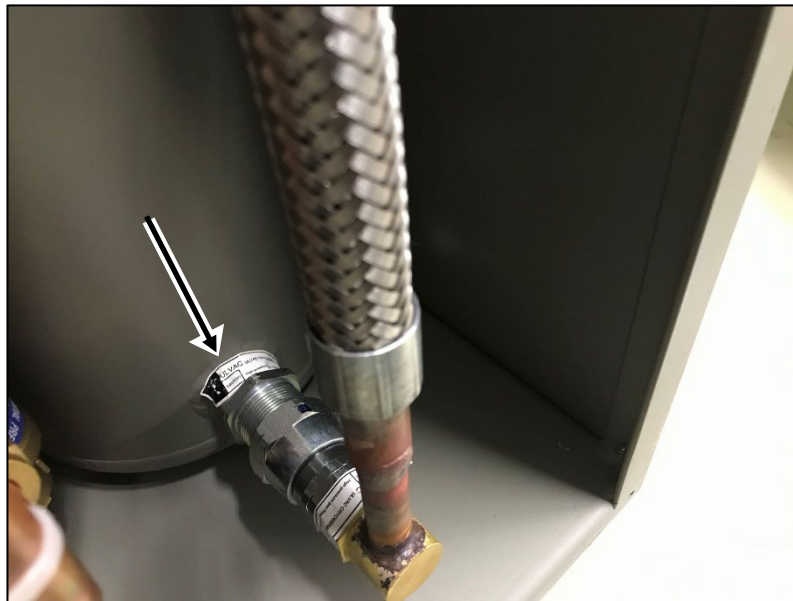








Figure Example of the sealing sticker pasted on the self-sealing coupling



## Disposal Considerations

Disposal of our products must be done in accordance with applicable national and local laws and regulations.

				<b>WARNING</b>
<p>The cryopumps or cryocoolers may contain residue of hazardous substances resulting from actual use. Contact your safety supervisor and follow the instructions to remove such toxic substances before disposing</p>				

		<b>WARNING</b>
<p>Do not disassemble, pressurize, heat up a compressor unit, or throw it into fire. Such actions may lead to explosion of the adsorber inside the compressor unit. For safe disposal of an adsorber, follow the procedures below.</p> <ol style="list-style-type: none"><li>(1) Remove high pressure helium gas inside the adsorber to reduce the internal pressure to the level of ambient atmospheric pressure. To do so safely, use tools appropriate to the adsorber coupling such as our charging adaptor (for cryocooler maintenance).</li><li>(2) Remove the coupling to make it visible that the adsorber has been depressurized before proceeding to the next step.</li></ol>		

We provide Safety Data Sheet (called SDS) of our products upon your request.

Please contact us if necessary.

This page intentionally left blank.

## Section 1. C30PMVRT-E1 Compressor Description

1.1	Introduction .....	1-1
1.2	Terminology .....	1-2
1.3	Cryopump system documents .....	1-2
1.4	Roles of compressor in cryopump system .....	1-3
1.5	Compressor specifications .....	1-4
1.6	Component descriptions .....	1-6
1.7	CRYO-U® cryopump installation .....	1-11

### 1.1 Introduction

C30PMVRT-E1 is a compressor unit for cryopump system. C30PMVRT-E1 can change the operation frequency with an inverter installed inside the compressor. Our Cryo MBS Meter MBDI-2 outputs a contact to the inverter and the inverter changes the compressor motor frequency depending on the second stage temperature of the cryopump.

Table 1-1 C30PMVRT-E1 Compressor model

Compressor model	Cooling method	Number of connectable refrigerator	Refrigerator motor	Specification*1	Power consumption 60/50/40Hz
C30PMVRT-E1	Water cooled	Up to 2 (multiple*2)	3 phase	Operate maximum of two sets of R50RT (RM50T) refrigerators	6.7/4.5/3.6kW

\*1 Refer to Appendix B for detailed specifications of connectable pumps and refrigerators.

\*2 Although there are three connectors for refrigerator cables, only two cables can be connected.

Table 1-2 shows the relations between cryopump temperature, compressor motor operation frequency, and SET POINT of Cryo MBS Meter (MBDI-2). Figure 1-1 shows the state of cryopump temperature and operation frequency.

Table 1-2 Timing of compressor motor frequency

	Cryopump status	Cryopump temperature	Compressor motor operation frequency	Cryo MBS Meter (MBDI-2)	
				SET POINT4 (Set temp. 15K) (a contact)	SET POINT3 (Set temp. 20K) (a contact)
①	Cooling down	Temp. > 20K	60Hz	OFF	OFF
②	Cool down completed	$20K \geq \text{Temp.} > 15K$	50Hz	OFF	ON
③		$15K \geq \text{Temp.}$	40Hz	ON	ON

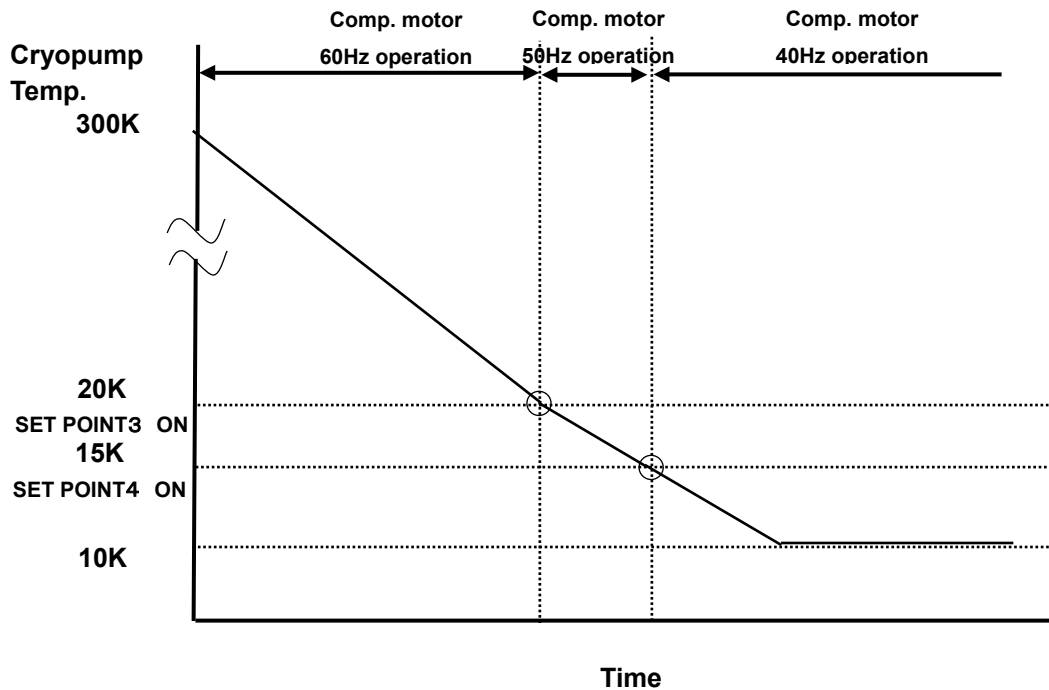


Figure 1-1 Compressor motor behavior

## 1.2 Terminology

- 1) There are two types of cryopump. One is the CRYO-U<sup>®</sup> series cryopump which can pump almost any gas and the other is CRYO-T super trap series which is specialized for pumping water. Unless otherwise specified, the term “cryopump” refers to both types.
- 2) The term “Compressor” means compressor assembly. The helium compressor which is a part of the assembly is sometimes called “compressor motor” or “compressor pump” to differentiate from the whole assembly.
- 3) The cryopump system does not start by itself but by the command from a customer’s equipment or higher system. Thus, the cryopump system will be one of the components of a whole system at customer’s facility.  
Henceforth, an interface between the cryopump system and a customer’s equipment (chamber) or higher system is called “equipment-side” for short.
- 4) Inverter is used for changing operation frequency of compressor motor.
- 5) MBDI-2 displays a temperature by connecting to a thermometer attached to a cryopump. MBDI-2 outputs a contact point by each set temperature.

## 1.3 Cryopump system documents

The cryopump system documents basically consist of two manuals: the cryopump manual and the compressor manual. They are delivered along with the purchased products. Accessories for the system and manuals for optional devices are enclosed depending on the product specifications that the customer orders.

#### **1.4 Roles of compressor in cryopump system**

The cryopump system consists of a cryopump and a compressor and is capable of condensing and adsorbing almost all kinds of gas molecule inside the pump. Thus clean high vacuum and ultra high vacuum can be easily created.

The Compressor provides high pressure helium gas for the cryopump refrigerator through helium supply flexible hose. Refrigerator expands high pressure helium gas and provides cooling to condense and adsorb gas molecule inside the pump. Helium gas pressure is reduced and the gas returns to the compressor through the helium return flexible hose. The compressor compresses the low pressure helium gas to turn it into high pressure gas and supply it to the cryopump refrigerator again.

This helium line is a closed circuit and helium gas is cycled to use. Therefore the compressor can be operated for long time without refilling helium gas.

Helium gas is compressed in a highly-reliable oil injection type helium compressor. Helium gas recovers its purity as it flows through an oil separator and an adsorber, where contaminants are removed.

It is necessary to check the elapsed time of operation and replace adsorber regularly to maintain refrigeration capacity as well as prevent breakdown of the refrigerator. Refer to "Section 7.2 Replacement of adsorber".

The Compressor requires maintenance. Read "Section 7 Maintenance" thoroughly and conduct regular maintenance.

**1.5 Compressor specifications**

**1.5.1 Dimensions**

Figure 1-2 shows the dimensions of C30PMVRT-E1.

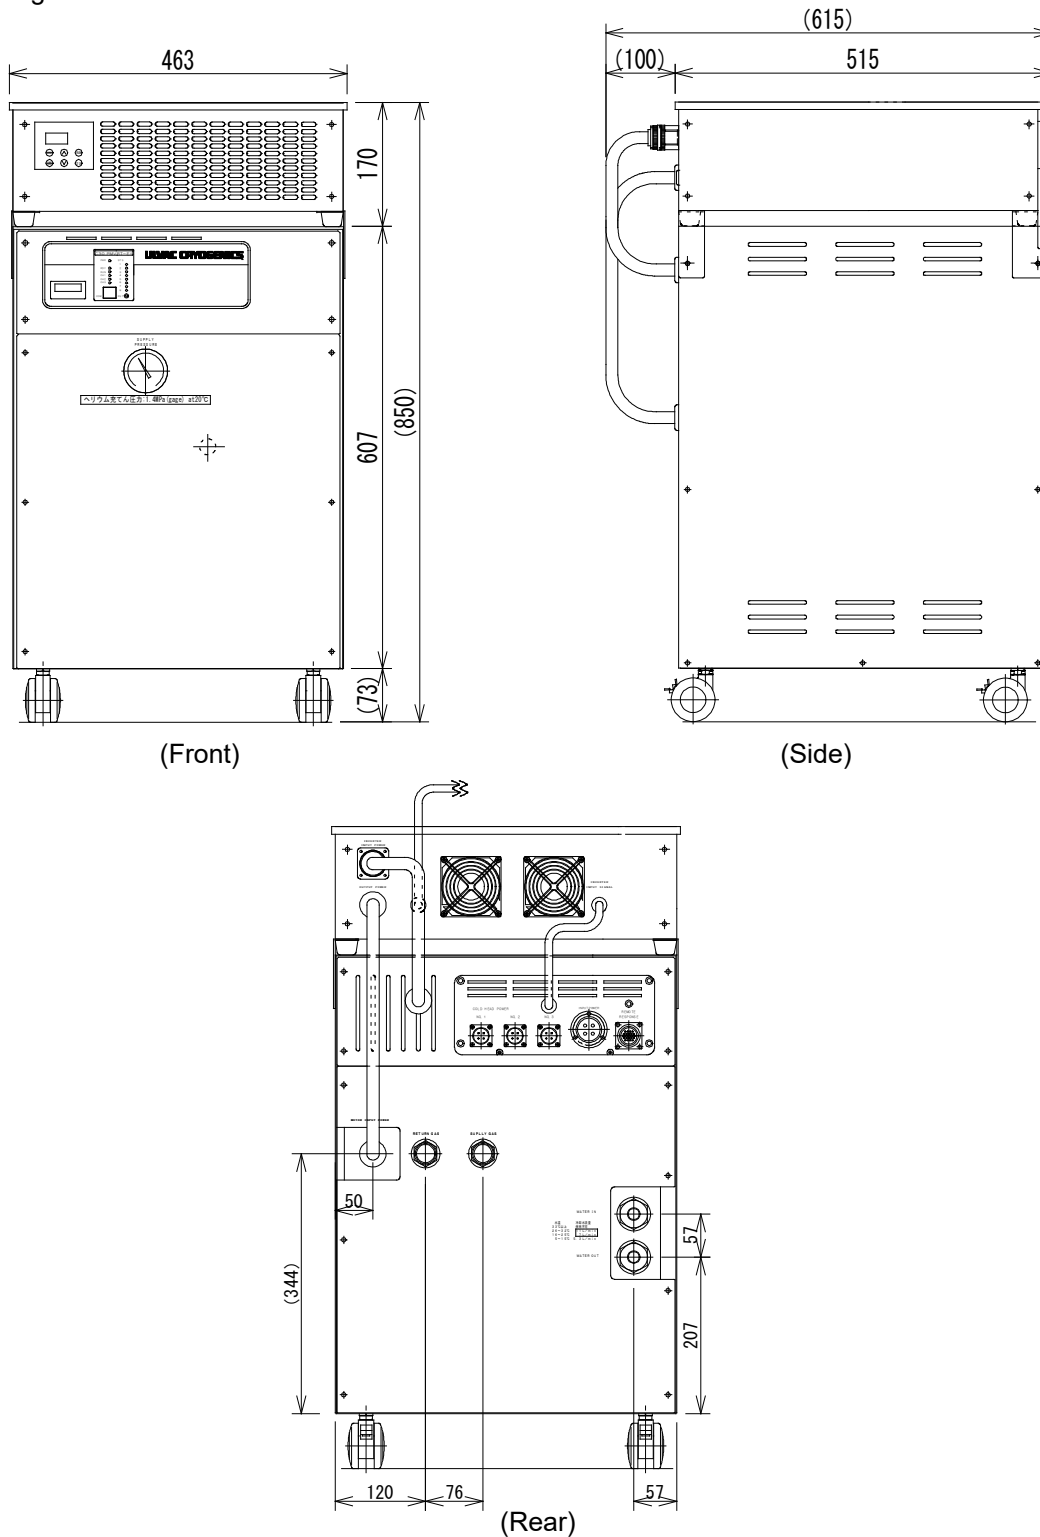


Figure 1-2 C30PMVRT-E1 Unit Compressor dimensions

### 1.5.2 Weight

Table 1-3 shows weight of the compressor.

Table 1-3 Compressor weight

Model	Weight [kg]
C30PMVRT-E1	142

\*The weight in this table is of standard compressors. The weight depends on the specifications of the customer's order.

### 1.5.3 General specifications

The tables below show power supply rating, cooling water requirements, installation environment, operation requirements and electromagnetic environment resistance characteristics. (Tables 1-4 ~1-7)

Table 1-4 Power supply rating

Item		Specifications
Power	Voltage × Phase × Frequency	AC200V(±10%) × 3Φ × 50/60Hz
	Electric current (60Hz/50Hz/40Hz)	7.0kW/5.6kW/4.4kW
	Stationary electric current consumption <sup>(*)</sup>	21.4A/19.6A/18.8A
Customer-supplied rated electric current (minimum) <sup>(**)</sup>		30A/5kA
Grounding		D class grounding (with the ground resistance of 100Ω or less)
<sup>(*)</sup> During cooling down of the cryopump, until it stabilizes at a low temperature, the electric current value is about 10% larger than the stationary electric current. Longer flexible hoses also increase the electric current. (A set of 20m flexible hose will increase the electric current by 5% compared to the nominal value. <sup>(**)</sup> Circuit Breaker Current Rating / Interrupt Rating		

Table 1-5 Cooling water requirements

Item	Requirements
Water temperature (Cooling water inlet)	5 – 32 °C
Flow rate	5 - 15 L/min
Cooling water supply pressure	Max. 0.7MPaG
Pressure drop (water inlet to water outlet)	0.02 – 0.17MPa (See Fig. 2-3)
Alkalinity (pH)	6.5 – 8.0 pH
Calcium Carbonate	< 75ppm
Refer to "Section 2.4 Cooling water requirements" for more details.	

Table 1-6 Installation environment and operation requirements

Item	C30PMVRT-E1
Ambient operating temperature	10 – 35 °C
Ambient storage temperature	-10 – 55 °C
Humidity	5 - 90% (non-condensing)
Altitude	< 1000m
Vibration	< 0.6G, 10 – 55 Hz
Atmosphere	Free from metal powder, dust, flammable and corrosive gas
Static helium pressure at 20 °C <sup>(*)</sup>	1.4±0.04MPaG
Sound pressure level during operation	< 70 dBA
<sup>(*)</sup> Refer to "Section 5.1 Verification of helium static pressure" for details.	

Table 1-7 Electromagnetic environment resistance characteristics

Item	Specification
Insulation resistance (Between power supply, Input-output and Ground)	5MΩ and more / 1 min. (500V megohmmeter)
Dielectric withstanding voltage (Between power line and ground)	1500V / 1 min.
Noise immunity (Power line) (*1)	±1500V
Noise immunity (Input-output line) (*1)	±500V

(\*1)By fast transient/burst method. Test duration : 1 min.



**ATTENTION:** Do not put things or devices on the compressor to maintain cooling by natural air flow. The heat from the compressor may damage the things or devices as well.

## 1.6 Component descriptions

This section describes components that need adjustments and/or verifications during operation and maintenance.

Compressor front view is shown in Figure 1-3 and rear view in Figure 1-4.


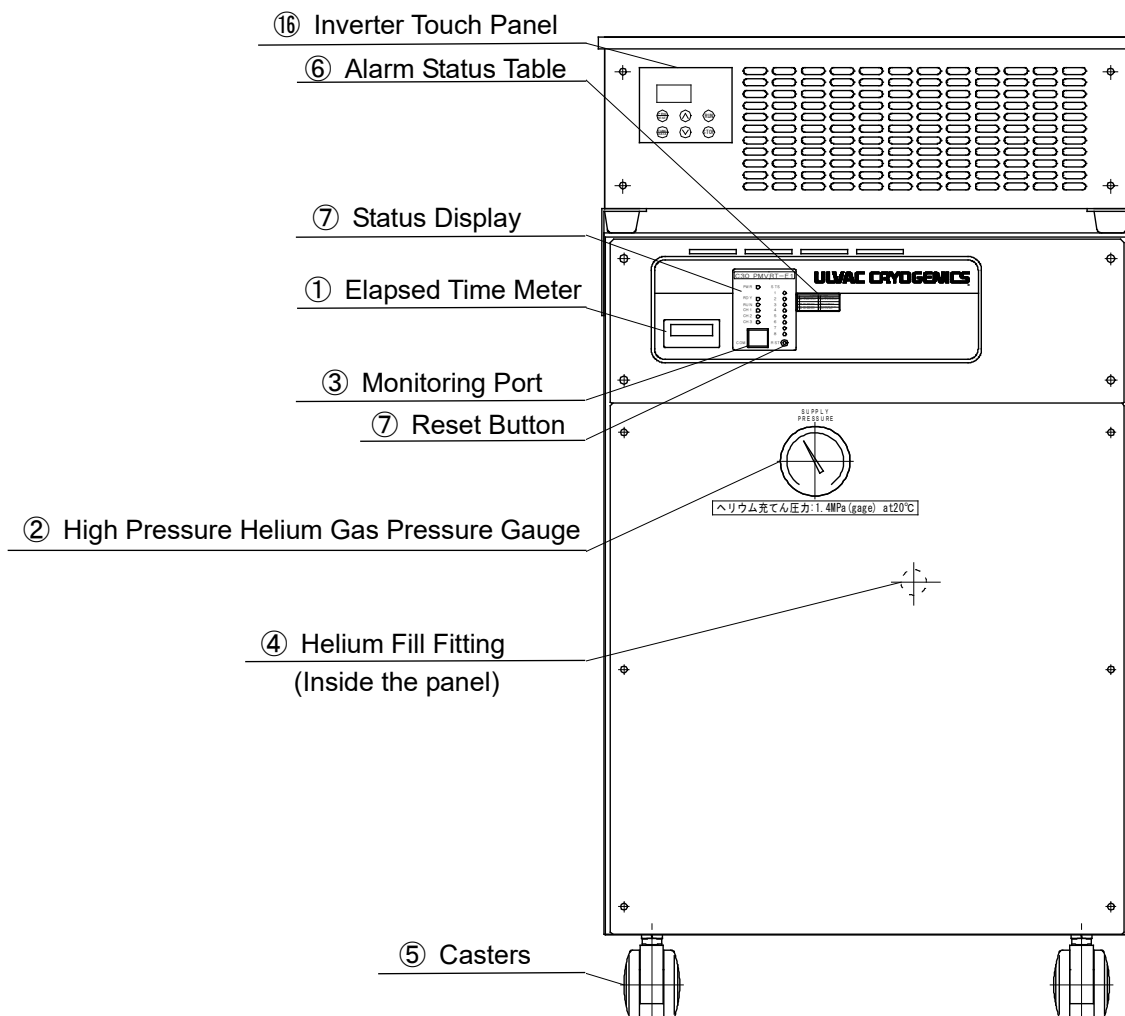


Figure 1-3 Compressor front view



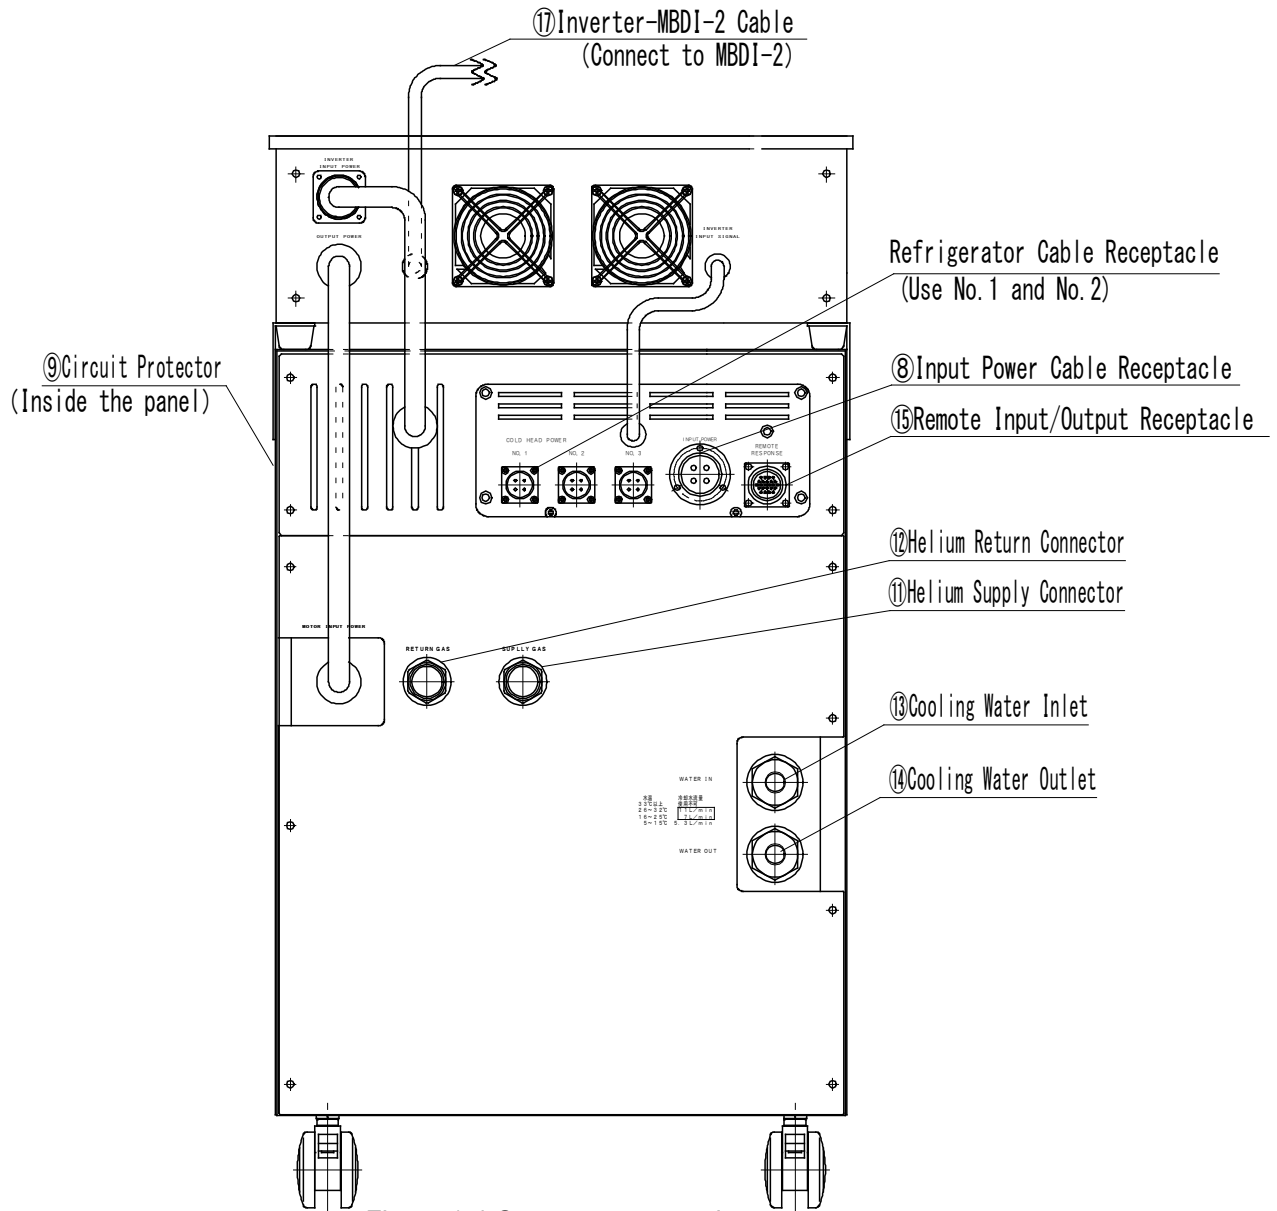

### ① ELAPSED TIME METER

It displays the elapsed time of operation (when it is in operation). The displayed value cannot be changed.

### ② HIGH PRESSURE HELIUM GAS PRESSURE GAUGE (HELIUM PRESSURE GAUGE)

The high pressure helium gas pressure gauge, hereafter “the helium pressure gauge” indicates the static helium filling pressure when the compressor is not in operation, and the supply line helium pressure when the compressor is in operation.

Refer to “Section 5.1 Verification of helium static pressure” to verify the helium pressure when the compressor is not in operation.

### ③ COM: MONITORING PORT

It is a port for inspection/servicing use only by our engineers. It is not available for customer use.

#### ④ HELIUM FILL FITTING (Inside the panel)

Use this to adjust helium gas pressure when needed. When adding helium gas, use only helium gas with purity of 99.999% or above.

Refer to "Section 7.3 Adjusting system helium pressure" for details.

#### ⑤ CASTERS

Use them to move the compressor. Lock the casters when not moving the compressor.



**ATTENTION:** All casters of the compressor unit must be locked after the compressor unit has been placed at a proper position or in storage. This is to avoid injury to persons from an unexpected slippage of the compressor.

It is also required to have preventative measures for slippage and/or overturning in case of earthquake. Please contact us if fixing brackets need to be attached to the compressor. Figure 1-5 shows an example of anchor bolts mounting positions when fixing brackets are attached to the compressor.

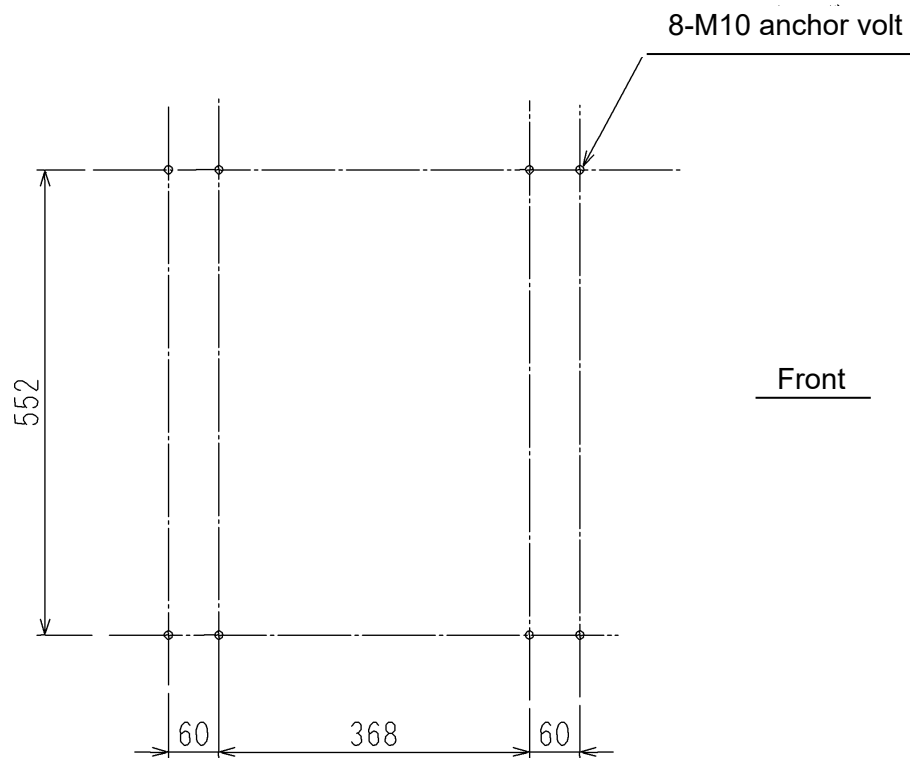


Figure 1-5 Anchor bolts mounting positions (example)

#### ⑥ ALARM STATUS TABLE

This shows a list of alarm codes indicated by the STS (Status) LED indicators for alarm indication. Refer to "Section 8.3 Alarm code descriptions" for troubleshooting procedure of each alarm code.

All status display LED indicators will remain unlit when there is no problem.

### ⑦ STATUS DISPLAY and RESET BUTTON

There are two kinds of status display, 6 LED indicators for the compressor operation status and 8 STS LED indicators for alarm indication.

「PWR」 indicator (RED) lights up when the compressor is powered ON.

「RDY」 indicator (GREEN) lights up when the compressor is ready for operation.

「RUN」 indicator (GREEN) lights up when the compressor is in operation.

「CH1」 indicator (GREEN) lights up when refrigerator No.1 is in operation.

「CH2」 indicator (GREEN) lights up when refrigerator No.2 is in operation.

「CH3」 indicator (GREEN) is not used with C30PMVRT-E1 compressor.

One or more STS LED indicators for alarm indication will light up when malfunction of the compressor is detected. Hereafter this event is referred to as alarm in this manual. When an alarm lights up, the buzzer will be activated as well. In an event of alarm, check the status with the ALARM STATUS TABLE. Refer to “section 8.3 Alarm code descriptions” for more details.

STS LED indicators and the buzzer will keep the alarm status even after the alarm event has been cleared.

To clear the alarm status and stop the buzzer, push the reset button through the “RST” hole with a thin rod.

Then, the “RDY” indicator will light up again.

### ⑧ INPUT POWER CABLE RECEPTACLE (INPUT POWER)

Connect the power cable plug to this receptacle.

Refer to “Section 4.5.1 connecting the input power cable” for how to connect the power cable.



**ATTENTION:** Compressor is supplied with main power from the equipment-side distribution panel. The distribution panel must have an appropriate circuit breaker for the compressor in accordance with the national and local codes and standards of the country where the equipment is installed.

### ⑨ CIRCUIT PROTECTOR (Inside the panel)

The circuit protector is installed in order to protect wiring and connectors from the over-current produced by an electrical overload or short circuit.

The circuit protector is set to ON when it is shipped.



**WARNING:** Circuit protector must be operated by authorized electrician familiar with the structure and the risk of this equipment. Failure to observe this warning may result in severe bodily injury or fatal accident.

### ⑩ COLD HEAD (REFRIGERATOR) CABLE RECEPTACLES (COLD HEAD POWER NO.1, NO.2)

Connect refrigerator cables for cryopump operation to these receptacles.

**⑪ HIGH PRESSURE HELIUM SUPPLY CONNECTOR (SUPPLY GAS)**

High pressure helium gas is supplied to the cryopump through this connector. A 1/2 self-sealing coupling is used.

Refer to “Section 1.4 Roles of compressor in cryopump system” to understand the operation of helium closed-loop cryopump system.

Also refer to “Section 4.3 connecting and disconnecting helium flexible hoses” for connection method of helium lines.

**⑫ LOW PRESSURE HELIUM RETURN CONNECTOR (RETURN GAS)**

Connect a return line of low pressure helium gas from cryopump to this connector. A 1/2 self-sealing coupling is used.

Refer to “Section 1.4 Roles of compressor in cryopump system” to understand the operation of helium closed-loop cryopump system.

Also refer to “Section 4.3 connecting and disconnecting helium flexible hoses” for connection method of helium lines.

**⑬ COOLING WATER INLET (WATER IN)**

Cooling water from customer’s facility is supplied through this inlet to cool the compressor during operation. Customers need to have cooling water piping as a part of the facility.

Refer to “Section 4.2 Connecting cooling water piping” for connection of cooling water.

**⑭ COOLING WATER OUTLET (WATER OUT)**

Cooling water used in the compressor returns from this outlet to customer’s facility.

Refer to “Section 4.2 Connecting cooling water piping” for connection of cooling water.

**⑮ REMOTE INPUT-OUTPUT RECEPTACLE (REMOTE RESPONSE)**

Connect the remote cables to this receptacle.

The cryopump and the compressor can be operated through the remote cables. It also enables sending of operation answer-back signals and alarm signals activated in an event of compressor failure to the equipment-side. Refer to “Section 2.6 Remote functions” for details of remote functions.

The plug for remote cables is supplied with the compressor. Customers need to solder the cables to use it. Refer to “Section 4.5.2 Connecting remote cables” for definitions of connector pin assignments and appropriate connection method for your application.

**⑯ INVERTER TOUCH PANEL**

Compressor motor frequency is changed by the inverter. Inverter status can be checked using the inverter touch panel.

**⑰ INVERTER-MBDI-2 CABLE**

It connects to the SET POINT of the MBDI-2. Depending on each cryopump temperature, the MBDI-2 output a contact to the inverter through INVERTER-MBDI-2 CABLE.

**1.7 CRYO-U® cryopump installation**

C30PMVRT-E1 can operate up to two refrigerators of cryopump units (U22HB) at a time (See Table 1-1). Figure 1-6 depicts a typical cryopump installation with U22HB and single compressor. Please contact us if you wish to connect to cryopumps other than U22HB. For detailed instructions on cryopump installation with compressor, refer to “Section 4.4 Cryopump installation”

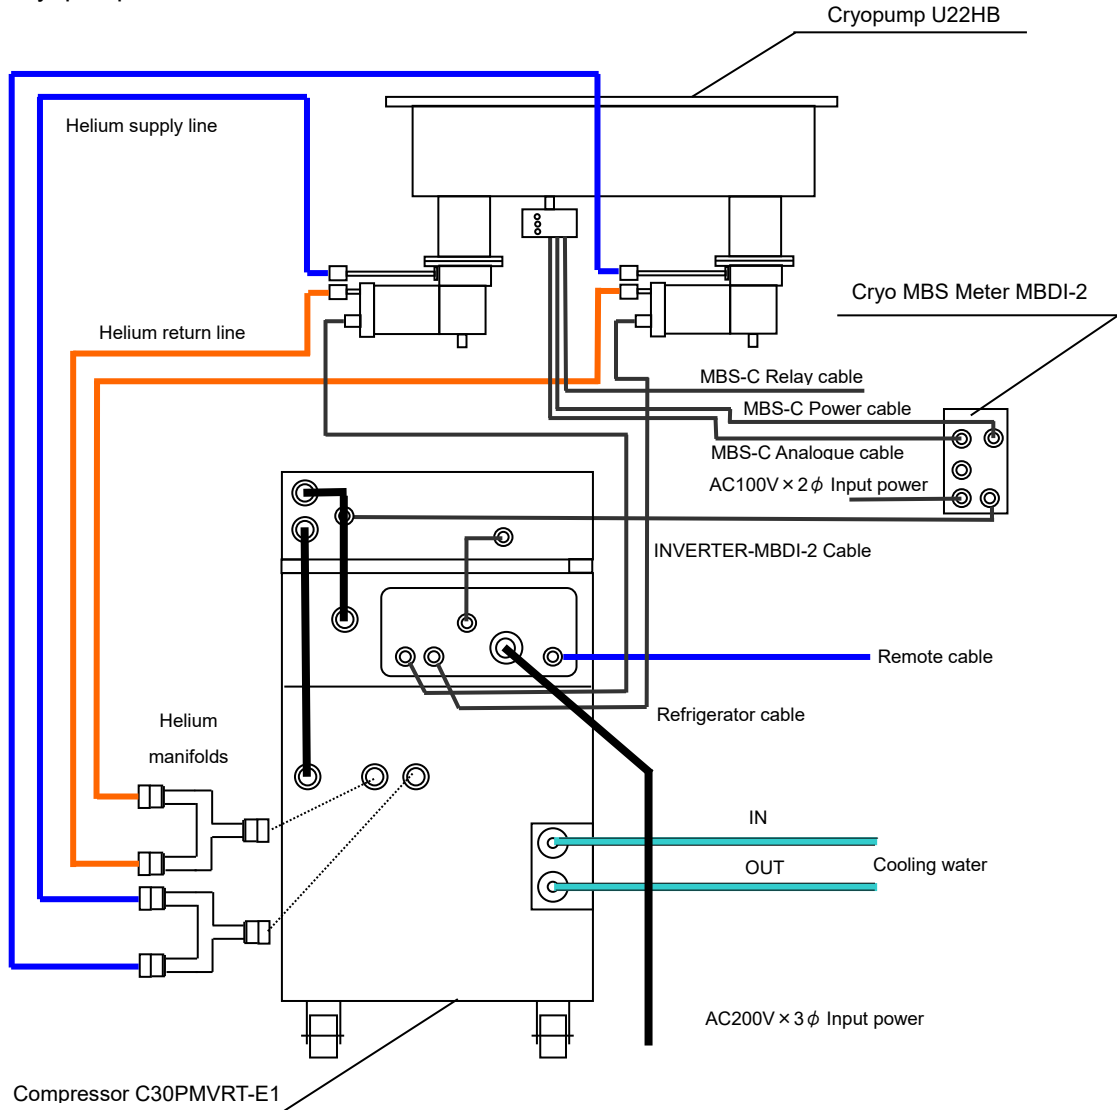


Figure 1-6 Typical cryopump installation with U22HB and C30PMVRT-E1 compressor

This page intentionally left blank.

## Section 2 Considerations before Installation

2.1	Combination of cryopump and compressor .....	2-1
2.2	Installation environment requirements .....	2-1
2.3	Wiring requirements .....	2-2
2.4	Cooling water requirements .....	2-4
2.5	Length of cables and flexible hoses.....	2-6
2.6	Remote functions .....	2-6

This section provides the information, which should be considered before installing the compressor.

Below are the explanations of combination with cryopump, installation environment requirements, wiring requirements, cooling water requirements, length of cables and flexible hoses, remote functions, and subsidiary functions.

### 2.1 Combination of cryopump and compressor

Refer to the table in “Appendix B Combination of C30PMVRT-E1 Compressor and Cryopump” for typical combinations of cryopumps and compressor units.

### 2.2 Installation environment requirements

Refer to Table 1-6 in Section 1 and check the installation environment and operating conditions to ensure there is no problem. The environment should be free from contaminants such as oil, coolant and other suspended solids. Compressor should be installed in a space with enough ventilation to avoid suffocation in a case of helium leakage.

Figure 2-1 shows the dimensions of installation space and levelness of the floor required to maintain the performance of a compressor. The compressor should be installed on a flat floor surface.



**ATTENTION:** Do not put things back, front and sides of the compressor to maintain cooling by natural air flow. Also, a space of 500mm back and front of the compressor is needed for maintenance. The space which can work without difficulty is necessary around the power cable on the back of a compressor.

Refer to Figure 1-2 in Section 1 for the dimensions of the compressor.

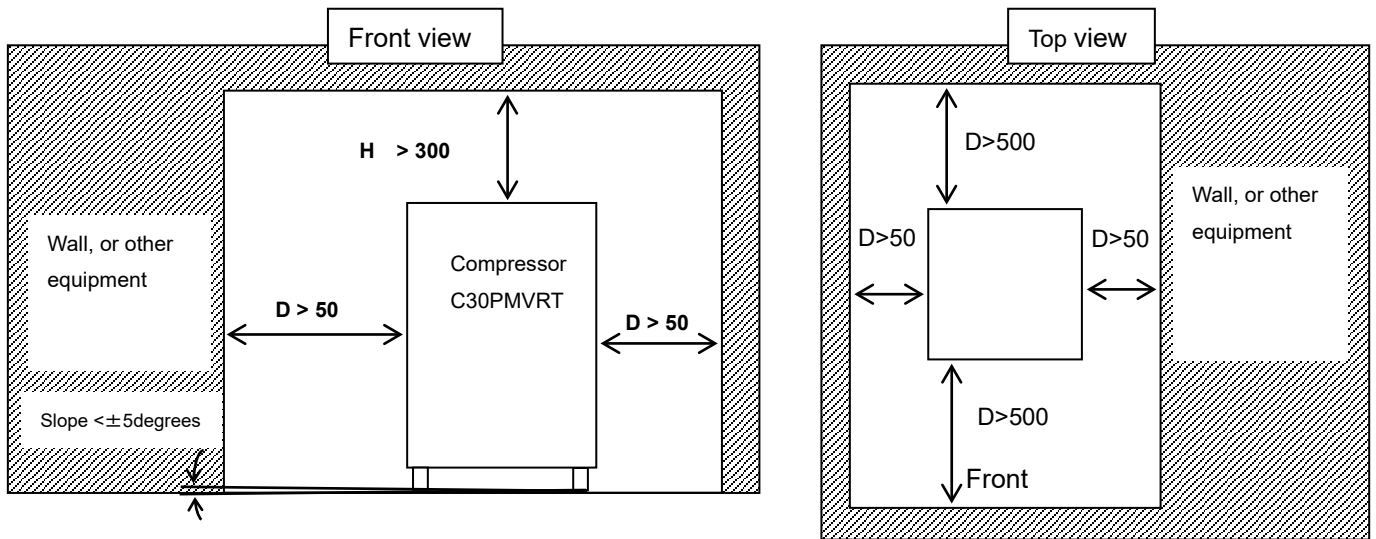


Figure 2-1 Required space for compressor installation (scale: mm) and levelness

### 2.3 Wiring requirements

Table 2-1 shows the specifications of input power cables. For connecting procedures of the input power cable refer to “Section 4.5 Electrical connections”.

Table 2-1 Input power cable specifications

Item	Symbol	C30PMVRT-E1
Input power cable	INPUT POWER	Copper wire / 600VAC, 3 conductors with ground <sup>(*)</sup>
		5.5mm <sup>2</sup> , 8 mm <sup>2</sup> <sup>(*)</sup>
<sup>(*)</sup> The color of the ground wire is green.		
<sup>(*)</sup> Unless otherwise specified, 5.5 mm <sup>2</sup> cables are attached to the compressor.		

Supply AC power for compressor from the equipment-side distribution panel. The distribution panel should have branched circuit breakers for each compressor (see Figure 2-2). Circuit breakers must be appropriate and meet the international and the national codes and standards of the country installed (Refer to UL489 and IEC60947-2). Also, circuit breakers must be installed in the distance to be able to check the compressor.

Refer to Table 1-4 in section 1 for circuit breaker current rating.



**ATTENTION:** Almost any standards require installing a breaker for branch in upstream of equipment and protect power supply line which connects each equipment; circuit breakers must be installed. Failure to observe this warning may result in damage and/or break down of the equipment.



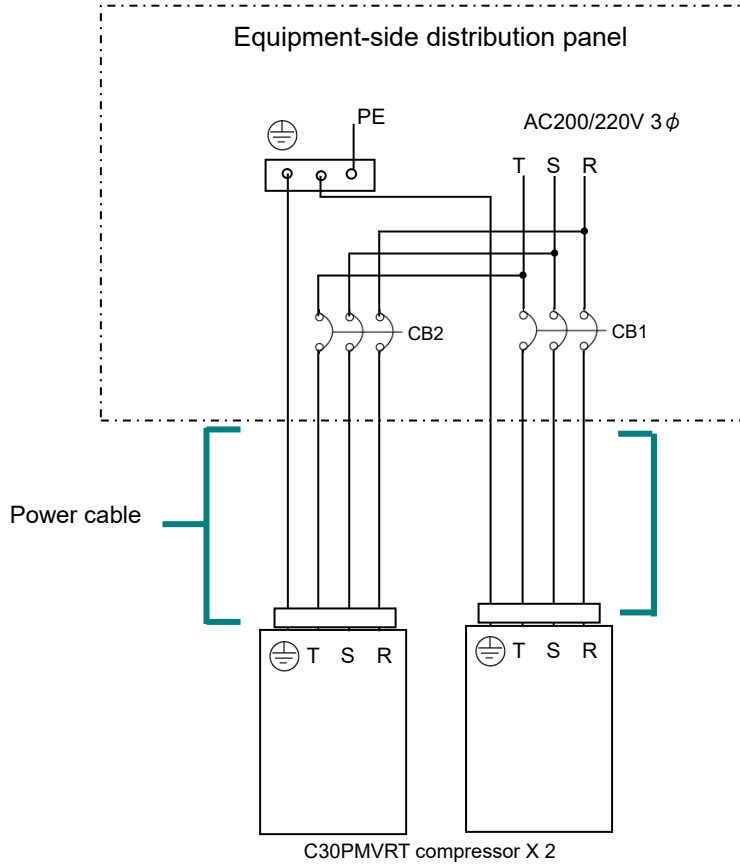


Figure 2-2 Equipment-side power circuit

Table 2-2 shows wire gauges of refrigerator cable and remote cable for use.

Table 2-2 Control and signal wire gauges

No.	Item	Symbol	Connection type	Wire size	Note
1	Refrigerator cable <sup>(*1)</sup>	NO.1, NO.2,	Connector	#20 AWG	Option
2	Remote cable	REMOTE RESPONSE	Connector	#22 AWG	Customer supply

(\*1) Current rating of the refrigerator is less than 0.7A.



**ATTENTION:** Refer to “Section 4 Equipment Installation, Piping, and Wiring” for routing of the cables above.

## 2.4 Cooling water requirements

Cooling water must meet the requirements indicated in the following subsections. It is necessary to maintain the performance of the compressor for extended periods without malfunction.

### 2.4.1 Checking chemicals and quality of water

Table 2-3 indicates recommended quality of water. Ensure that cooling water meets the requirements in the table. If the quality of water is not in allowable ranges, water quality improvement may be needed.

Table 2-3 Recommended cooling water for compressor

Item	Unit	Allowable Range
pH (25°C) <sup>※1</sup>	pH	6.5 - 8.0
Conductivity (25°C) <sup>※1</sup>	mS/m	< 30
Chloride ion, Cl <sup>-</sup> <sup>※1</sup>	mg / L	< 50
Sulfate ion, SO <sub>4</sub> <sup>2-</sup> <sup>※1</sup>	mg SO <sub>4</sub> <sup>2-</sup> / L	< 50
Acid consumption (pH4.8) <sup>※1</sup>	mgCaCO <sub>3</sub> / L	< 50
Total hardness <sup>※1</sup>	mgCaCO <sub>3</sub> / L	< 50
Total carbonic acid <sup>※1</sup>	mg / L	< 10
Calcium carbonate	mg / L	< 75

※ 1 The values of the items are based on the water quality management standards of Japan Refrigeration and Air Conditioning Industry Association.

Note1: Table 2-3 is based on the water quality management standards of Japan Refrigeration and Air Conditioning Industry Association. Refer to local standards of water quality management where the compressor is installed outside Japan. It is necessary to check chemicals and water quality to avoid corrosion, clogging, and other faults caused by low quality of water and/or chemicals.

Note2: Ground water may contain a great quantity of carbonate acid which facilitates corrosion. Ensure to perform carbonate check as soon as water is taken from ground without exposing water to atmosphere. Otherwise the result may be false.

### 2.4.2 Determining pressure, temperature and flow rate of cooling water

Refer to Table 1-4 in Section 1 for typical cooling water requirements.  
The pressure of cooling water for supply lines must be 0.7MPaG or less.

Figures 2-3 show the relation of water flow rate, water temperature, and water pressure loss

Determine the values for water flow rate and pressure loss so that the compressor can be run with an enough margin to the water temperature change throughout the year.



**ATTENTION:** If the temperature of the cooling water is below 10°C, stop the cooling water when the compressor has been stopped. If the cooling water of temperature below 10°C is supplied continuously while stopping the compressor, it may increase viscosity of lubricant oil and cause start up failure of the compressor when the operation command is sent.

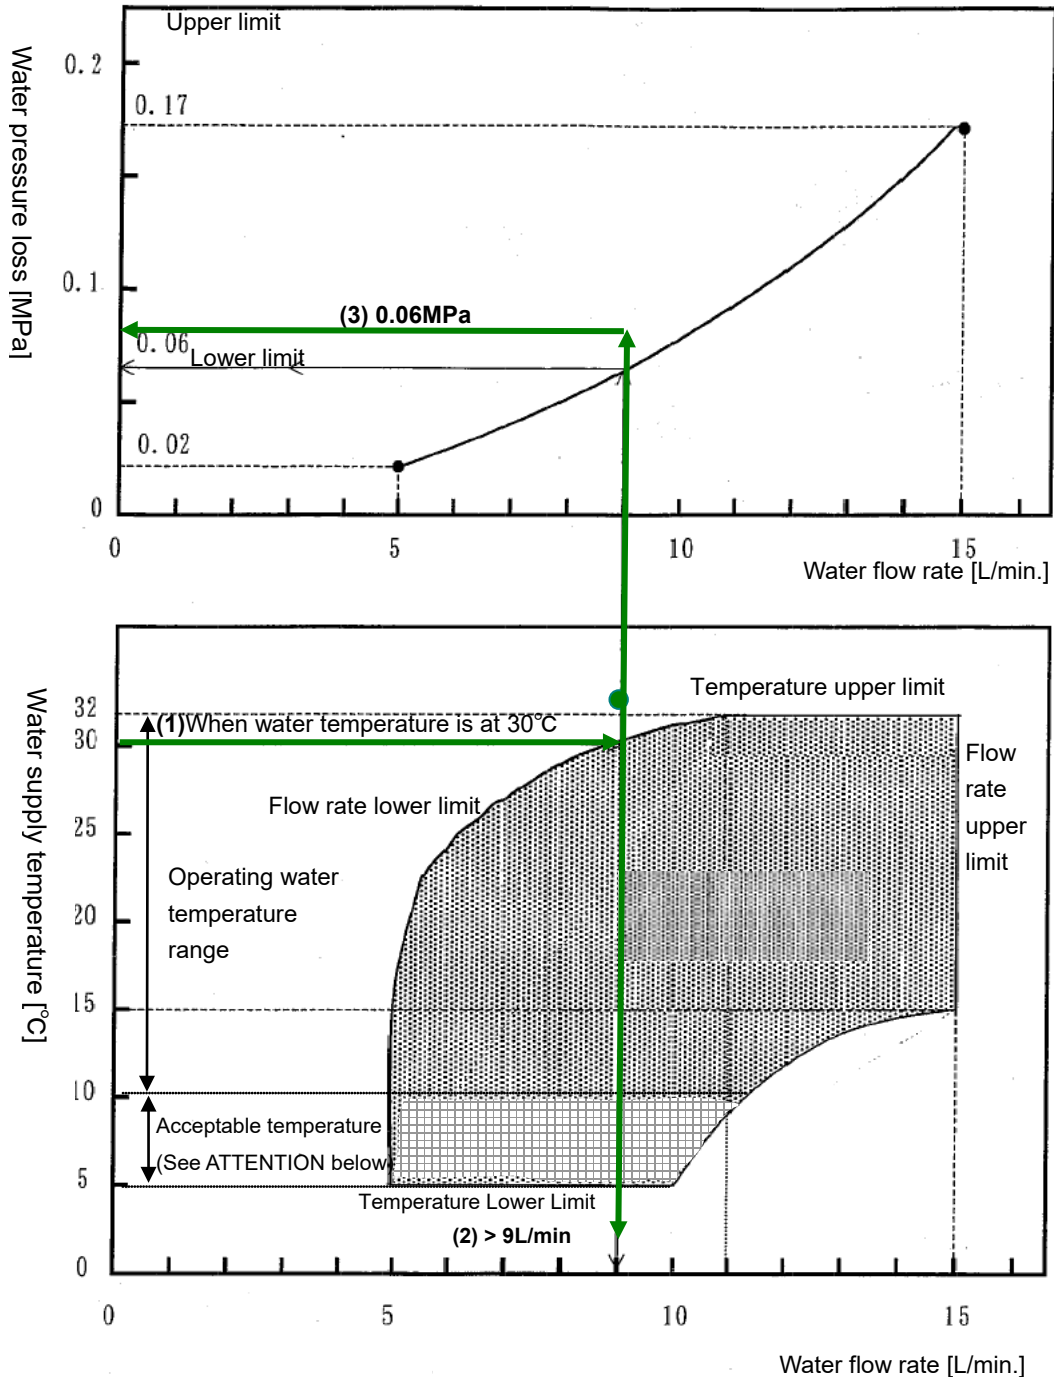


Figure2-3 Cooling water flow rate, water supply temperature, and water pressure loss

### 2.4.3 Directions for using cooling water

Rc 3/8 female pipe thread is used for both “Cooling water inlet” and “Cooling water outlet”. It is recommended to install a filter in the “Cooling water inlet” line in order to remove contaminant in the cooling water.

Installing a water flow meter in the cooling water line of the compressor is also recommended.

It is recommended to have an air blower in your facility to drain the compressor. To use an air blower, connect the hose for the air blower to the “Cooling water inlet” fitting instead of the cooling water pipe which is used usually.

### 2.5 Length of cables and flexible hoses

Standard length of optional cables and flexible hoses are listed in Table2-4.

Table 2-4 Standard cables and flexible hoses

Item	Standard length [m]	Quantity
Input power cable	3	1
Refrigerator cable	3	2
Flexible hose	3	4



**ATTENTION:** Please contact our Service Engineering Division or the nearest customer support center for different length of cables and/or flexible hoses.

### 2.6 Remote functions

Compressors can be remote-controlled from customer’s equipment side.

The following provides information on features and functions of the remote interface and the time chart of signals. It is also available to select an operating mode of the compressor in accordance with your applications. The following information also contains instructions for selecting operating modes.

#### 2.6.1 Remote interface specifications

Remote interface specifications are indicated in Table 2-5.

Table 2-5 Remote interface specifications

Item			Specification
Model	Signal	Quantity	
C30PMVRT-E1	Input	5	Photo Coupler Isolation Input Maximum voltage: 26VDC, Current: less than 8mA Rated Voltage: ON:20V and above, OFF:3V or less
	Output	4	No-voltage a contact Maximum Load: 30VDC / 100mA

**2.6.2 Remote input interface circuit**

Figure 2-4 shows the remote input interface circuit.

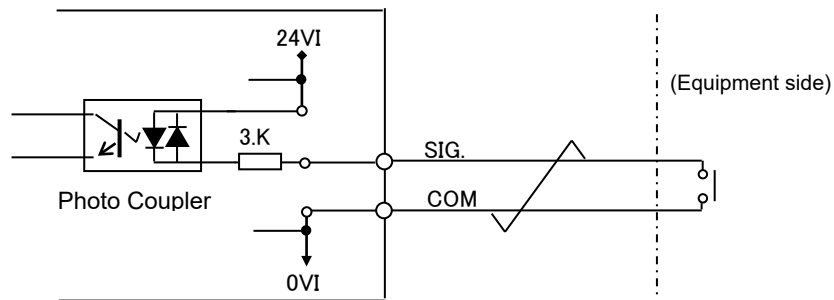


Figure 2-4 Remote input interface circuit

Note that the 0VI is not connected to the ground line inside the compressor in the input circuit. COM line is common with all other inputs.

**2.6.3 Remote output interface circuit**

Figure 2-5 shows the remote output interface circuit.

Each output is an isolated output contact. At the equipment side different power supply can be used for each signal. However, considering that the wiring is sequence signal line, it is recommended to use a DC24V power supply for all signals.

Since it is the contact output, the polarity of DC24V in Figure 2-5 can be reversed. Make provisions for the interface circuit at the equipment side.

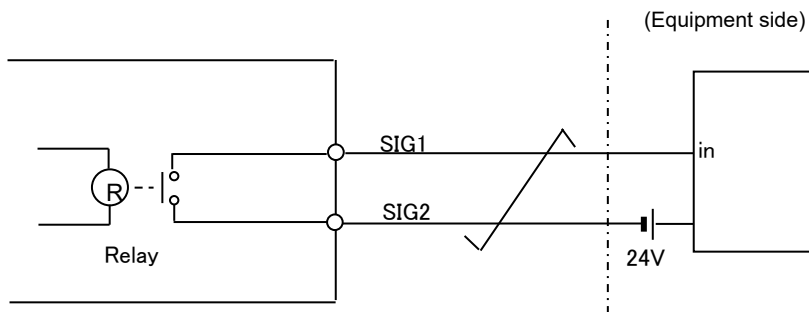


Figure 2-5 Remote output interface circuit

## 2.6.4 Signal names

Table 2-6 Remote interface signals

Type	Signal description	Signal name	
Input	Compressor start (Momentary operating mode)	COMP START	COM
	Compressor stop (Momentary operating mode)	COMP STOP	COM
	Compressor start/stop (Alternate operating mode)	COMP ON/OFF	COM
	Refrigerator No.1 start/stop	CH1 REF	COM
	Refrigerator No.2 start/stop	CH2 REF	
Output	Compressor answer-back	COMP RUN1	COMP RUN2
	Alarm	ALARM1	ALARM2
	Refrigerator No.1 answer-back	CH1 ACK1	CH1 ACK2
	Refrigerator No.2 answer-back	CH2 ACK1	CH2 ACK2

Note: Refer to "Section 4.5 Electrical connections" for details of signal names.

## 2.6.5 Signal functions

The compressor can be controlled in two different operating modes, Momentary operating mode and Alternate operating mode. You can neither use both operating modes at the same time, nor switch one operating mode to the other depending on the situations. Ensure to choose one of the operating modes and connect signal lines needed for the operating mode you chose. Do not connect signal lines for the operating mode that you will not use. Decide the operating mode depending on the application of the equipment side. Momentary operating mode is equivalent to operate by using pushing button switch, and Alternate operating mode is equivalent to operate by using selector switch. Alternate operating mode is easier and simpler for use in general.

### Selecting operating mode

Default operating mode is either Momentary operating mode or Alternate operating mode. The operating mode is switched automatically. The operating mode is determined by recognizing into which input pin the operation command of the compressor has entered after turning on the power supply.

Once the operating mode is selected, the mode will be kept until the compressor is turned off.

### Signal functions only for Momentary operating mode

#### **COMP START (Compressor start)**

The compressor pump starts operation by turning this command signal ON for a short period of time and the compressor keeps the operation status. Turn the command signal ON for more than 0.3 second. (Refer to the description of **COMP STOP** below).

Command signals for refrigerators (CH1 REF and CH2 REF) should be turned ON to start the refrigerators.

### **COMP STOP (Compressor stop)**

This is a paired signal with **COMP START**.

Use this signal to stop the compressor pump and refrigerator. Turn the command signal OFF for longer than 0.3 seconds and the compressor pump and all refrigerators will stop and keep the status.

Keep the signal ON unless you need to stop operation. To stop operation by this signal, **COMP START** signal must be turned OFF beforehand. However leave this signal ON when to turn ON **COMP START** signal.

### **Signal functions only for Alternate operating mode**

#### **COMP ON/OFF (Compressor start/Stop)**

With Alternate operating mode, turning this signal ON starts operation of the compressor pump and OFF stops all the refrigerators and the compressor.

The command for refrigerators (CH1REF and CH2REF) should be turned ON as well as this signal.

### **Signal functions for both operating modes**

#### **CH1 REF, CH2 REF (Refrigerators No.1-2 start/stop)**

Use the command signals CH1REF~CH2REF at the equipment side depending on how many refrigerators are used. While the compressor pump is in operation, to start the refrigerator(s) turn ON the corresponding signal (either CH1REF or CH2REF, or all) . Turn OFF the signals and the refrigerator stops operation.

When the compressor pump is not in operation, it will not return the answer back signal (**CH\* ACK**) even if this signal (**CH\* REF**) is turned ON.

Note: For the operation after a short power interruption, refer to “Section 2.6.6 Signal timing charts – Operation after a short power interruption”.



**ATTENTION:** Do not START/STOP the refrigerator frequently.

The refrigerator must not be started / stopped more than 6 times per hour and each status should be kept for at least 3 minutes. Frequent starting/stopping shortens the insulation life of the refrigerator motor and may cause a failure of the product.

Please use our temperature controller when turning ON/OFF the refrigerator for controlling temperature of a super trap.

#### **COM**

Each input “COM” line works as a return line of a corresponding control signal. It is recommended to twist the signal line and the “COM” line together.

Also, output signal wires mentioned below should be twisted as a paired signal. (e.g., CH1 ACK1 - CH1 ACK2)

#### **COMP RUN (Compressor answer-back)**

This is an answer-back signal responding to the compressor pump operation command. When the compressor starts operation, the answer-back signal is sent to the equipment.

Note: Refer to “Section 2.6.6 Signal timing charts –Answer-back signal delay” as well.

#### **ALARM (Alarm)**

When this signal is OFF, the compressor is ready for operation, or in operation. When

failure or malfunction occurs to the compressor, the signal turns ON, in other words, the contact output closes and the signal is conducted. To reset the alarm, push the “RST” button on the front panel of the compressor. However, the failure or malfunction should be cleared before the manual reset.

Note: When the compressor is turned OFF, ALARM signal turns ON for about two seconds. It also turns ON for about 0.5 seconds at the start of applying current.

### CH1 ACK, CH2 ACK (Refrigerators No.1-2 answer-back)

They are Answer-back output signals responding to each refrigerator command (CH\* REF).

When the refrigerators start operation, these answer-back signals will be sent to the equipment.

## 2.6.6 Signal timing charts

Figure 2-6 shows a timing chart for “Alternate operating mode” with two refrigerators.

Figure 2-7 shows a timing chart for “Momentary operating mode” with two refrigerators.

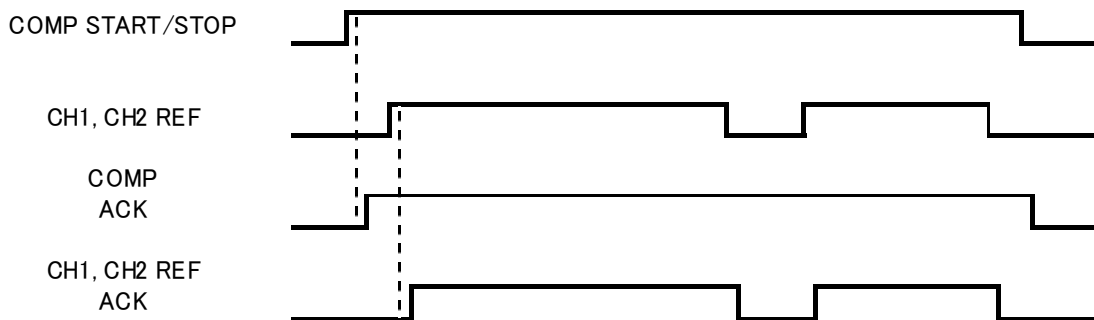


Figure 2-6 Timing chart for Alternate operating mode with two refrigerators



\*1) The holding time is 0.3 seconds or more.

Figure 2-7 Timing chart for Momentary operating mode with two refrigerators



### (Delay and recovery of Answer-back signal)

Please be sure to set the timeout time of an answerback signal as 8 seconds or more. The reason is explained below.

In normal operation, an answer-back signal is fundamentally send to the equipment side within a maximum of 0.3 seconds delay in response to a command signal. In the following conditions, however, the answer-back signal is sent behind time:

- (a) When the power supply of the compressor is turned ON
- (b) When the reboot command of the compressor is emitted within 0.3 second from the operation stop command
- (c) When a short power interruption for less than 2 seconds has occurred

In case of the above (a), it takes a few seconds for the compressor to initialize after it is powered on. Therefore the compressor will neither recognize nor output any remote signal with the equipment for a maximum of 5 seconds. For reference, the signal delay when powered on in Alternate operating mode is shown in Fig. 2-8.

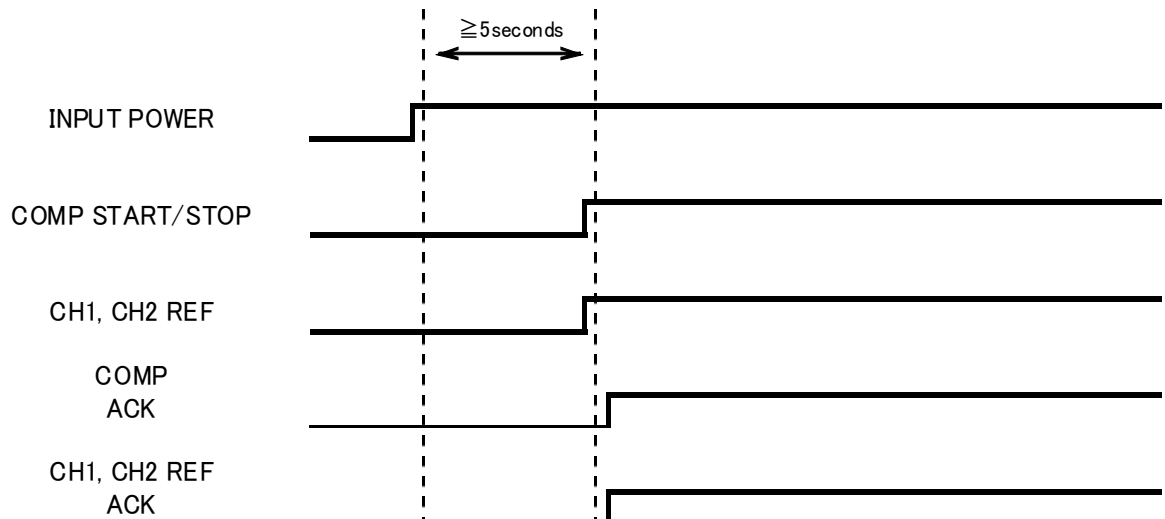


Figure 2-8 Signal delay when powered on (In Alternate operating mode)

In the cases of (b) and (c), the answer-back signal is also delayed for a maximum of 5 seconds to respond to the command of "COMP RUN". This is because the compressor pump waits to begin its operation until the helium pressure inside becomes stable. For references, Figure 2-9 shows the signal delay occurred in Alternate operating mode when the time period from a stop to a reboot is short, and Figure 2-10 shows the timing chart when a short power interruption has occurred in Momentary operating mode.

From the above-mentioned, the set value of the timeout of the answer-back signal should be determined based on the condition in which only the compressor has detected a short power interruption although a user's equipment is not detecting it because of differences of the specifications. In this condition, the equipment must recognize that the compressor is out of order because the equipment side can't receive the answer-back signal. If dispatch of the answer-back signal will be late for a preset timeout time even if the compressor has restarted after recovery of the input power, an alarm of a stop will come out.

Therefore, be sure to set the timeout time of an answer-back signal as 8 seconds or more in order to monitor the operating conditions of the compressor correctly.

Note: Figure 2-10 leads the following equation:  
 $td + tw + 1 \leq 2 + 5 + 1 = 8$  (seconds)  
 Where, "1" second is a margin added.


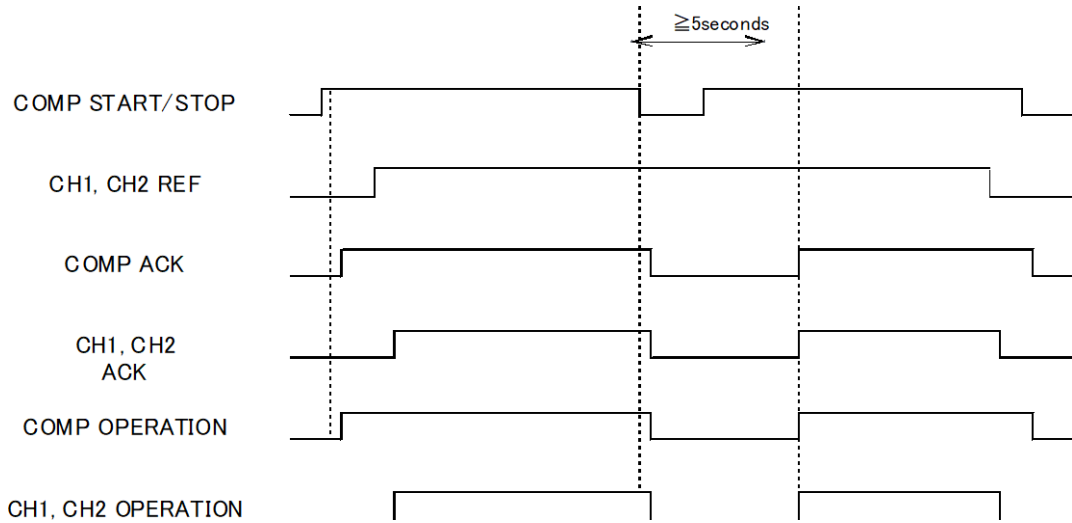


Figure 2-9 Signal delay when the time period from a stop to a restart is short  
 (In Alternate operating mode)

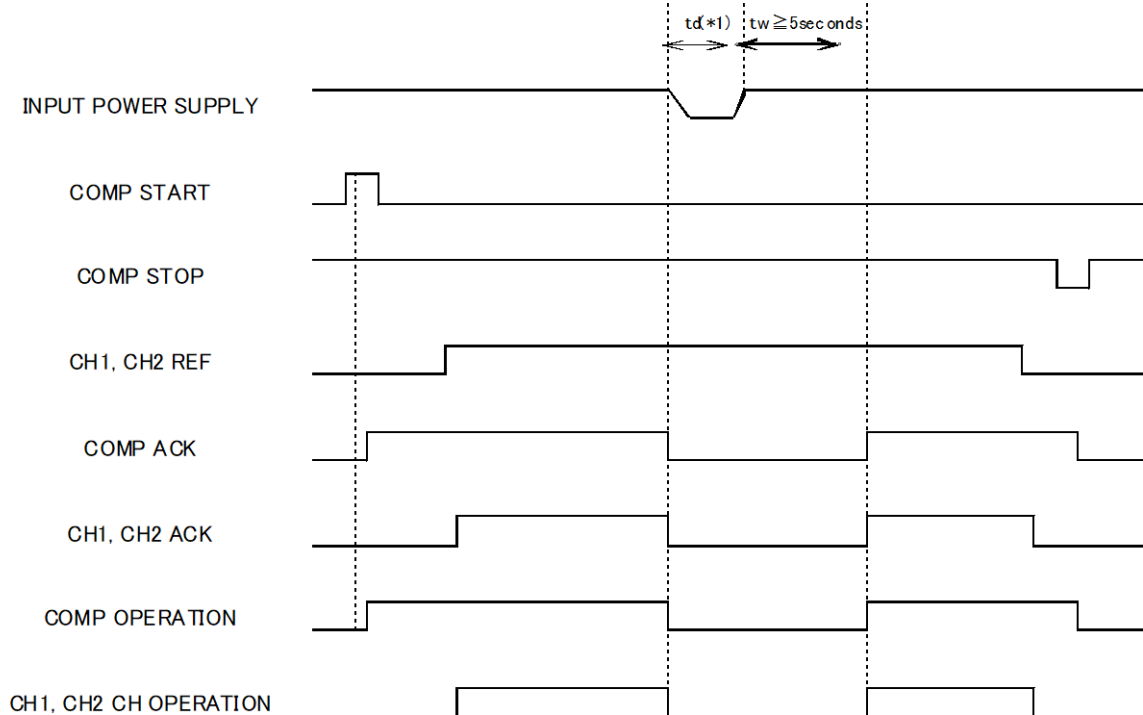

(\*1)  $t \leq 2$ seconds

Figure 2-10 Timing chart when a short power interruption occurs  
 (In Momentary operating mode)

**(Operation after a short power interruption)**

While the compressor is running in “Momentary operating mode”, if a short power interruption occurs and the input power is recovered within two seconds, the compressor pump restarts the operation automatically.

Refrigerators operation depends on the command from the equipment side after the input power is recovered.

In “Alternate operating mode”, the compressor restarts as soon as the input power is recovered because there is always the command from the equipment side.



**ATTENTION:** Refer to “Section 4.5.2 Connecting remote cables” for remote signal wiring.

This page intentionally left blank.

## Section 3 Unpacking and Inspection

3.1	Carton contents.....	3-1
3.2	Inspection of the compressor and accessories.....	3-1
3.3	Flexible hoses and specifications .....	3-2

### 3.1 Carton contents

When a product(s) delivered, make sure that there is no damage or shortage of delivered items by checking the external view of the package and the shipping list attached.

Please read the enclosed cover letter for the details. Depending on your specification, the option part(s) in Table 3-2 is attached.

Table 3-1 Carton contents

Item	Quantity
Compressor	1
C30PMVRT-E1 Manual	1
Inverter user's manual	1
Connector for remote operation	1

Table 3-2 Optional parts

Item	Quantity
Input power cable ( 3m or customized length)	1
Refrigerator cable( 3m or customized length)	2 <sup>( * 1 )</sup>
Flexible Hose ( 3m or customized length)	4 <sup>( * 1 )</sup>
Helium Manifold (For multiple refrigerator operation)	2 <sup>( * 2 )</sup>
Lipped bowl spanner (Flexible hoses installing tool)	2
Gasket for helium coupling (Spare)	4
<sup>( * 1 )</sup> The quantity depends on the number of refrigerators. For example, two refrigerators cables and four flexible hoses will be needed for two refrigerators	
<sup>( * 2 )</sup> The model of the helium manifold depends on the branching shape of the helium lines	

### 3.2 Inspection of the compressor and accessories

#### Compressor

Inspect and visually confirm that there is no evidence of damage, oil leak and/or helium gas leakage to the compressor. If there is a problem, please contact our Service Engineering Division or the nearest customer support center.

Also check the value of helium pressure gauge on the front panel of the compressor to confirm that there is no helium gas leakage (Refer to "Section 5.1 Verification of helium static pressure").

If the value of the helium pressure gauge indicates lower than the values in Table 1-5, adding helium gas is required. For the procedures of adding helium gas refer to "Section 7.3 Adjusting system helium pressure".

Please contact our Service Engineering Division or the nearest customer support center if the helium static pressure is significantly low.

#### Accessories

Inspect and visually confirm the accessories that there is no evidence of damage. If any damage is found, please contact our Service Engineering Division or the nearest customer support center.

### 3.3 Flexible hoses and specifications

Flexible hose (Helium flexible line) consists of helium gas filled flexible hose, and self-sealing couplings at both ends.

Listed below are the specifications of flexible hoses.

Table 3-3 Flexible hose specifications

Item	Specification
Helium gas	99.999% pure or more
Allowable helium pressure	Max.2.45MPaG
Maximum operating temperature	70°C
Material	SUS304
Standard length	3m
Minimum bending radius	250mm
Coupling	1/2inch self-sealing coupling
Tightening torque of coupling	20N·m

**<Note> The content of “Specifications and Drawings” specific to your system supersedes, if provided**



**ATTENTION: (Flexible hoses)**

Minimum bending radius of the flexible hose is 250mm.

Do not twist the flexible hose especially at both ends. Also, when bending the flexible hose ensure that no part of it becomes flattened.

Do not put things on the flexible hose.

Leave the dust caps on the self-sealing couplings of the compressor until the flexible hoses are connected to the couplings.

Failure to observe this warning may result in damage and/or break down of the equipment.



**ATTENTION:** When carrying the flexible hose, ensure that the bending radius does not become smaller than the minimum value listed above.

In the same manner as other equipment, avoid corrosion and condensation when storing.

## Section 4 Equipment Installation, Piping, and Wiring

4.1	Before installation.....	4-1
4.2	Connecting cooling water piping.....	4-2
4.3	Connecting and disconnecting helium flexible hoses.....	4-2
4.4	Cryopump installation.....	4-4
4.5	Electrical connections.....	4-5
4.6	Wire routing for compressor and other equipments.....	4-10

### 4.1 Before installation

This section describes appropriate procedure for installing C30PMVRT-E1 and connecting the compressor to a CRYO-U<sup>®</sup> cryopump.

Figure 4-1 is the block diagram for the compressor installation.

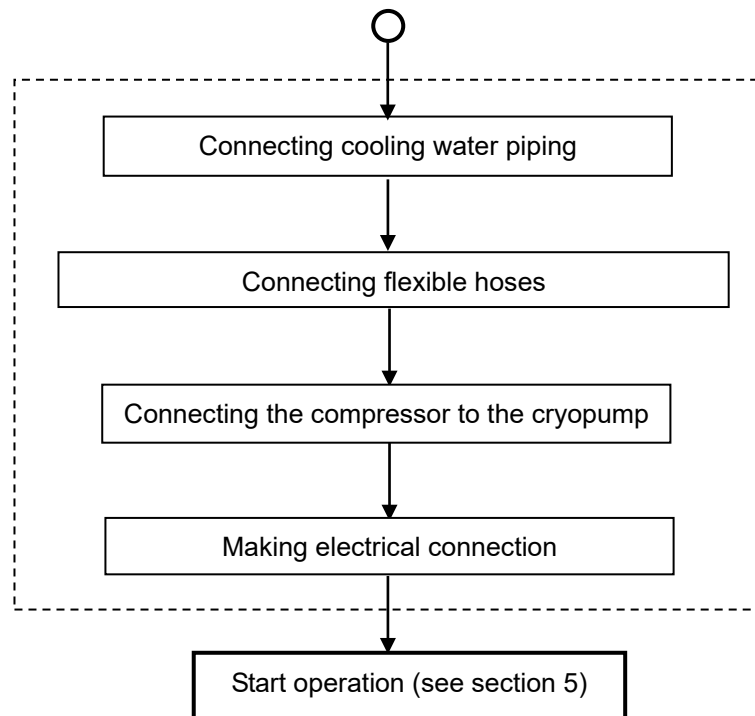


Figure 4-1 Installation procedure



**ATTENTION:** To ensure safe, reliable system performance, read this manual as well as other relevant manuals completely to gain a thorough understanding before beginning work.



**ATTENTION:** Following procedure must be undertaken by an authorized electrician familiar with the structure and risk of the product. Failure to observe this warning may result in severe bodily injury or fatal accident.

## 4.2 Connecting cooling water piping



**ATTENTION:** Cooling water for this compressor must meet the requirements described in “Section 2-4 Cooling water requirements”. Failure to observe this warning may result in damage to and/or break down of the equipments.

Rc 3/8 female pipe threads are used for both cooling water inlet and outlet of the compressor.

The connecting procedures using fitting and hose (tube) are shown below.

1. Apply plumbing pipe sealing tape properly to screw side of the fitting.
2. Connect the fittings to “WATER IN” and “WATER OUT” with a spanner.
3. Connect the hose to the “WATER OUT” fitting first then “WATER IN” and fix the hoses properly with hose clamps. Connect



**ATTENTION:** Do not over-torque the hose fittings. It may damage the cooling water inlet and/or outlet.

4. Supply water via the cooling water piping at specified flow rate and ensure that there is no leakage.

To connect cooling water piping in any other way, follow the manual of the component.

## 4.3 Connecting and disconnecting helium flexible hoses



**ATTENTION:** Follow the procedures below to connect and disconnect flexible hoses. Failure to observe this warning may result in damage to the O-ring seals of the coupling and/or leakage of helium gas.

### Connecting procedures

1. Remove all dust plugs and caps from the compressor, couplings and flexible hoses of the refrigerator. Check the connections and ensure that there is no dust or dirt on helium coupling gasket and around it. If there is any dust, remove it. Ensure that helium coupling gasket goes in the male coupling and there is no gasket for female coupling.
2. Return flexible hose is labeled “RETURN” with red letters. Connect the return flexible hose to “RETURN GAS” connector on the rear panel of the compressor. Then connect the other end of the return flexible hose to the connector labeled “RETURN” with red letters on the refrigerator side.

(Actual connecting method)

As shown in Figure 4-2, hold the braid support straight so that the connection parts fit properly and tighten by hands as tight as possible. Then tighten the coupling with two spanners as shown in Figure 4-3. See Figure 4-4 for usage of two spanners.

The torque value is 20N·m for both couplings. Complete the procedure as quick as possible to minimize helium gas leakage.



**ATTENTION:** To over-torque the couplings may result in breakage of the equipment.



3. Supply flexible hose is labeled "SUPPLY" with green letters. Connect the supply flexible hose to "SUPPLY GAS" connector on the rear panel of the compressor. Then connect the other end of the supply flexible hose to the connector labeled "SUPPLY" with green letters on the refrigerator side. Connecting method is the same as the return flexible hose.
4. Verify the helium filling pressure referring to "Section 5.1 Verification of helium static pressure".



Figure 4-2 Tighten with hands first

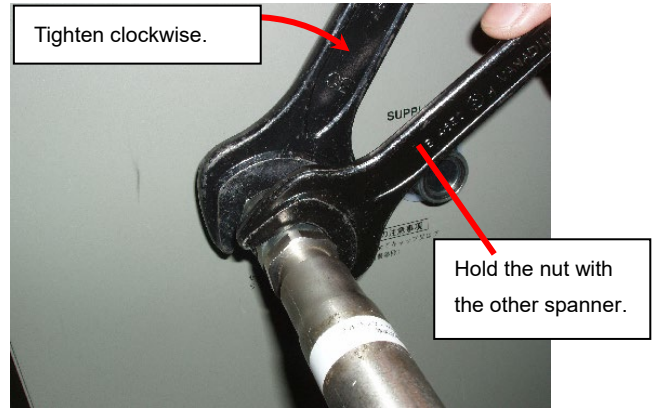


Figure 4-3 Tighten with two spanners

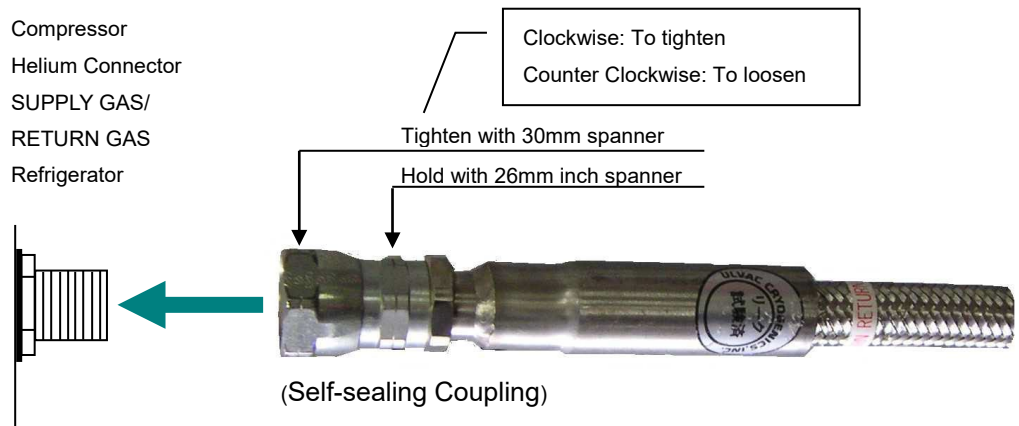


Figure 4-4 Connecting and disconnecting helium flexible hoses to compressor and refrigerator

**Disconnecting procedures**



**Precautions for disconnecting flexible hoses**

**ATTENTION:** If the flexible hoses are disconnected while the cryopump is still cold, the pressure inside the refrigerator will rise as its goes up and cause helium leakage via the pressure relief valve.

To disconnect flexible hoses from the connectors, use only two lipped bowl spanners (bolt width 26mm, 30mm). Do not use other spanners.

Loosen the couplings with two spanners and then take them off by both hands. Complete the procedure as quick as possible to minimize helium gas leakage.

#### 4.4 Cryopump installation

Figure 4-5 shows the connection of the compressor and the cryopump (U22HB).

1. Attach helium manifolds to the compressor connectors to connect multiple flexible hoses for the two refrigerators installed in a U22HB cryopump.

Refer to “Section 4.3 Connecting and disconnecting helium flexible hoses” for the method of installing manifolds as it is the same as connecting flexible hose to the compressor.

Connect flexible hoses to manifolds and to the refrigerators.

2. Connect the refrigerator cables from the rear panel of the compressor to the multiple cryopumps.

Connect the smaller refrigerator cable plug to the refrigerator receptacle. Insert the plug into the receptacle and then turn the rotating part of the plug to the right. Turn it until it won't turn any more to connect the plug properly.

Connect the bigger refrigerator cable plug to the compressor receptacle. Connect the plug to “COLD HEAD POWER NO.1” receptacle on the rear panel of the compressor and then turn the rotating part of the plug to the right. Turn it until it won't turn any more to connect the plug properly.

Connect the refrigerator cable to “COLD HEAD POWER NO.2” in the same procedure.

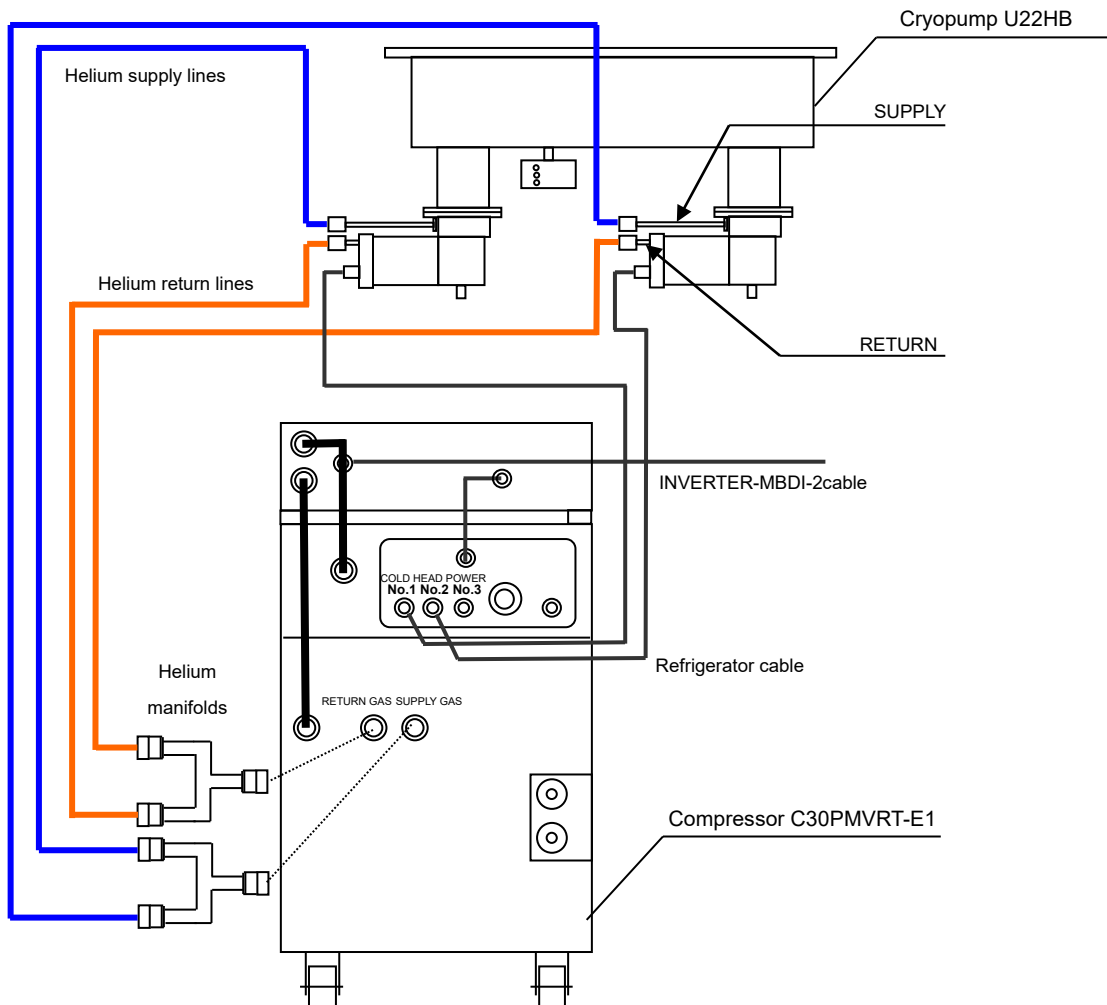


Figure 4-5 Example of Connections of the compressor and a cryopump (U22HB)

## 4.5 Electrical connections

Refer to “Cryopump installation” in previous page to connect the refrigerator cable.  
Below are the connecting procedures of input power cable and remote input/output cable.



**ATTENTION:** The electrical wiring must be done in accordance with all applicable local, national, and international standards. Failure to observe this warning may result in damage to and/or break down of the equipments.



**WARNING:** There is a danger of high voltage. Ensure that the input power source is OFF and locked before connecting or disconnecting input power cable. The wiring work must be undertaken only by an authorized electrician familiar with the structure and the risk of this equipment. Failure to observe this warning may result in severe bodily injury or fatal accident.

Refer to “Section 2.3 Wiring requirements” and confirm the specifications of the input power cable and the customer-supplied power circuit at the equipment side.  
Ensure that the breaker which supplies power to the compressor has been turned off on the distribution board at the equipment side before connecting the input power cable.  
To use a lock key to keep the power off status is effective as a fail safe.

### 4.5.1 Connecting the input power cable

Be sure to connect the input power cable first to the compressor and then to the circuit breaker of input power supply source. Wiring connection at power supply side must be done properly in accordance with the specifications of customer-supplied equipments. Connect ground wire as well (D class grounding).

Connect the plug of the input power cable to the compressor receptacle. After connecting the plug to the “INPUT POWER” receptacle on the rear panel of the compressor, turn the rotating part of the plug to the right. Turn it until it won't turn any more to connect the plug properly.

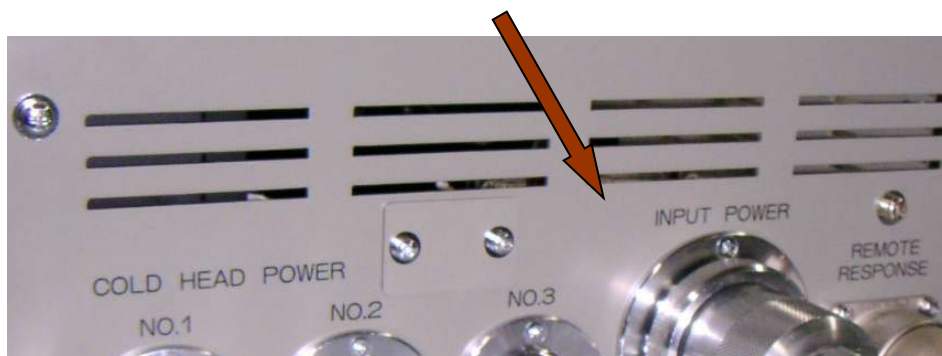


Figure 4-6 Connecting input power cable connector

### 4.5.2 Connecting remote cables

Figures 4-7 show connector pin assignments for remote cables. Necessary remote cables should be soldered to the connectors. Refer to “Section 2.3 Wiring requirements” and “Section 2.6 Remote functions” for remote cable specifications and remote functions respectively.



**ATTENTION:** Remote cables must be wired only by authorized electrician familiar with the structure and operation of this equipment. Failure to observe this warning may result in damage to and/or break down of the equipment.

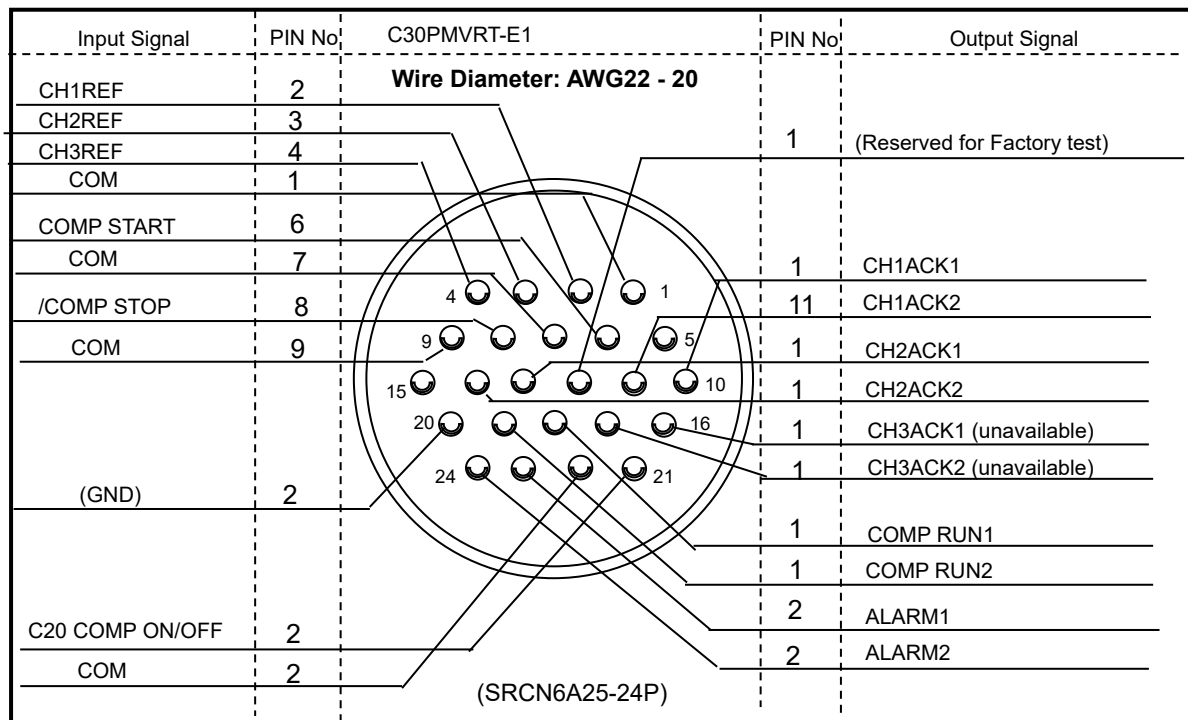


Figure 4-7 Remote Connector Pin Assignments for C30PMVRT-E1  
(Side View of the Plug Soldering)

Figure 4-8 shows the typical wiring for C30PMVRT-E1 with a cryopump (U22HB) in MOMENTARY OPERATING MODE.

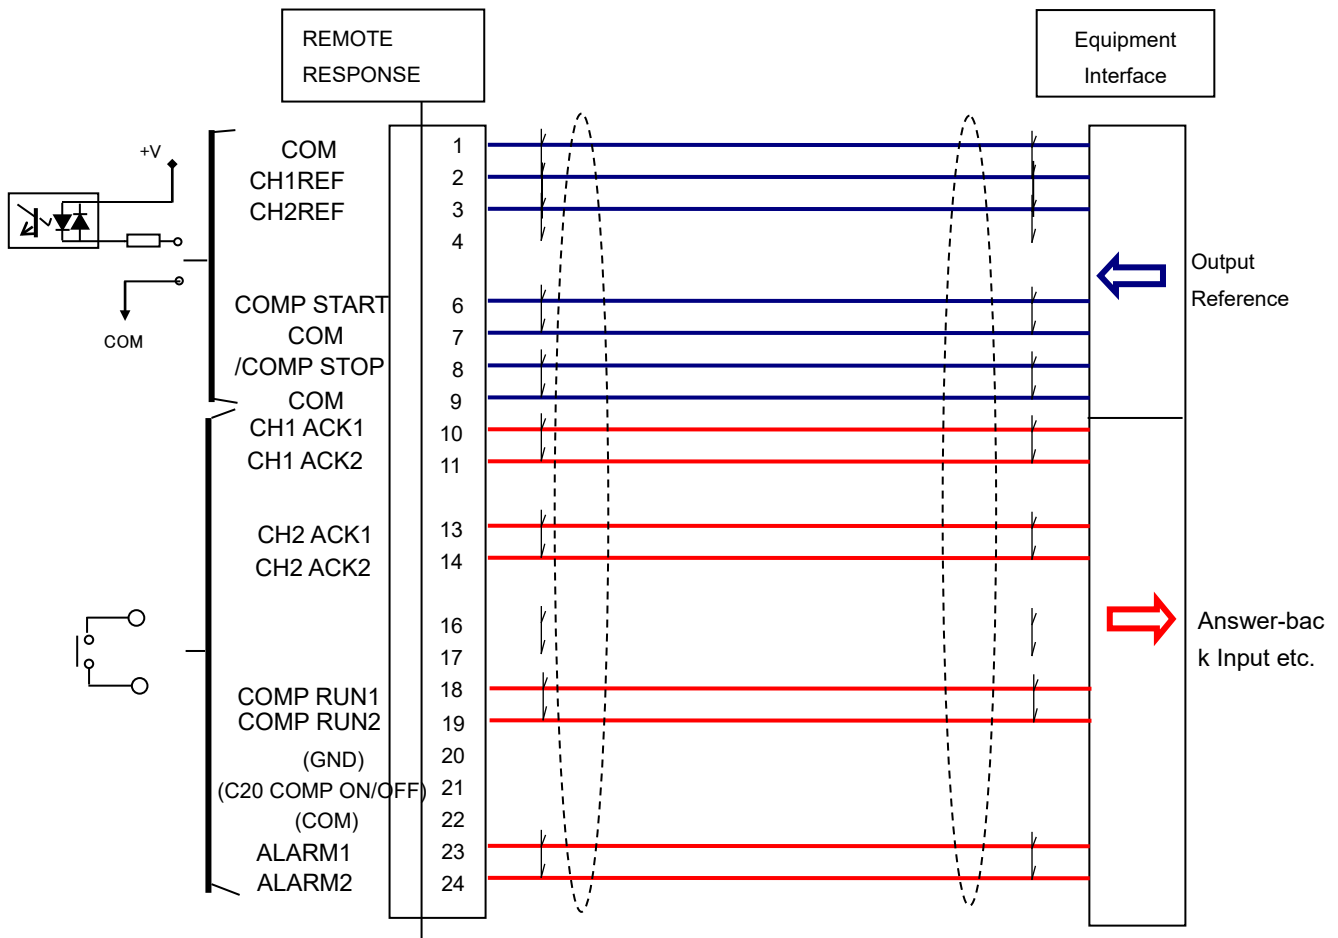


Figure 4-8 “Momentary operating mode” wiring example for a cryopump (U22HB) operation

#### Wiring precautions

- (1) CH1REF and CH2REF share COM of pin number 1.
- (2) In Momentary operating mode the pins number 6, 7, 8, and 9 should be wired as operation command signals but not 21 and 22. Conversely, in Alternate operating mode the pins number 21 and 22 should be wired as operation command signals but not 6, 7, 8, and 9. Therefore choose appropriate wiring depending on the operating mode.
- (3) Wire GND (pin number 20) only when it is needed. GND has the same electric potential as the compressor chassis. Connecting ground wire that has different power line (such as AC400V) from the compressor power supply line may cause overcurrent or noise problem due to a ground-loop.
- (4) Twist each signal line with a nearby COM line. (e.g.: Twist pin number 6 and 7)
- (5) COM lines are used as return lines of nearby signal lines. Therefore it is necessary to wire all the COM line which corresponds to the signal line, not to use just one COM line.
- (6) Twist paired signal lines such as CH1ACK1 and CH1ACK2.
- (7) These are signal lines. Do not drive the power device by direct output signals (such as answer-back signals) from the compressor. It may cause a failure of the product.

### Remote connector wiring procedure

Descriptions of the connector are shown in Figure 4-9.

#### (Taking apart a connector)

1. Loosen the set screw for the end bell fixation counterclockwise, and then take the end bell off from the connector body by turning it.
2. Remove the clamp saddle.

#### (Connecting cables)

3. Peel off the insulating coating to expose the proper length of the conductor. (Figure 4-10)

4. Pass the cables through the end bell and then solder the cables to the connector pins. Cover the soldered parts with heat shrinkable tubing.

5. If the bundle of the cables' diameter is smaller than that of the clamp saddle, wrap cables with tape to adjust the size of diameter so that it can be fixed in the clamp saddle.

#### (Assembling the connector)

6. Assemble the connector to the barrel by turning it.
7. Turn the set screw in clockwise to fix the end bell. (Figure 4-11)
8. Mount the clamp saddle.

(Solder identification)

9. Put the solder identification label on the connector or cables.

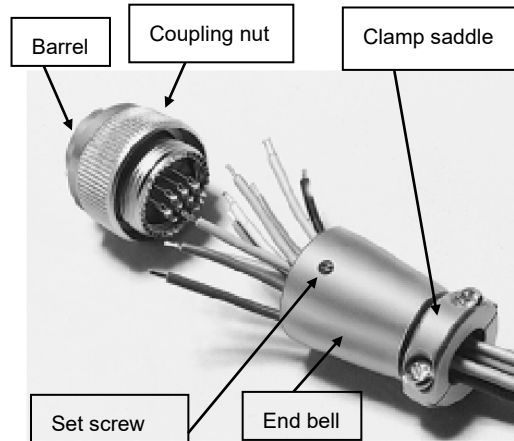


Figure 4-9 Connector parts descriptions

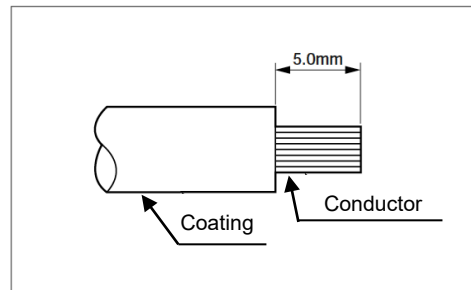


Figure 4-10 Cut length of insulation coating



Figure 4-11 Fix with set screw



**ATTENTION:** For lead-free soldering, use only specified lead-free solder iron and tip. Do not mix lead eutectic solder with lead-free solder. Failure to observe this warning may result in decreasing the life of soldered parts severely.



**ATTENTION:** Clear identification of solder: Listed below are the recommended abbreviations for identifying solders. Labeling the kind of solder clearly helps you to have proper maintenance.

Lead eutectic solder **SnPb** or **SP**

Lead-free solder (Sn-Ag) **SnAgCu** or **SAC**

Lead-free solder (Sn-Cu) **SnCuNi** or **SCN**



**ATTENTION:** Connector must be soldered by authorized personnel familiar with the kinds of solder and soldering procedure. Failure to observe this warning may result in breakdown of the product, or decrease the life of soldered parts severely.

### Connecting remote cable

Connect the cable plug to the compressor receptacle. After connecting the plug to the "REMOTE RESPONSE" receptacle on the rear panel of the compressor, turn the rotating part (coupling nut) of the plug to the right. Turn it until it won't turn any more to connect the plug properly.

### 4.5.3 Connecting compressor, MBDI-2, and MBS-C

Insert "INVERTER-MBDI-2 CABLE" plug from the compressor to the receptacle on the rear panel of the MBDI-2. Turn the rotating part (coupling nut) of the plug right until it won't turn anymore to fix it properly.

For connecting MBS-C and MBDI-2, please refer to MBDI-2 instruction manual.

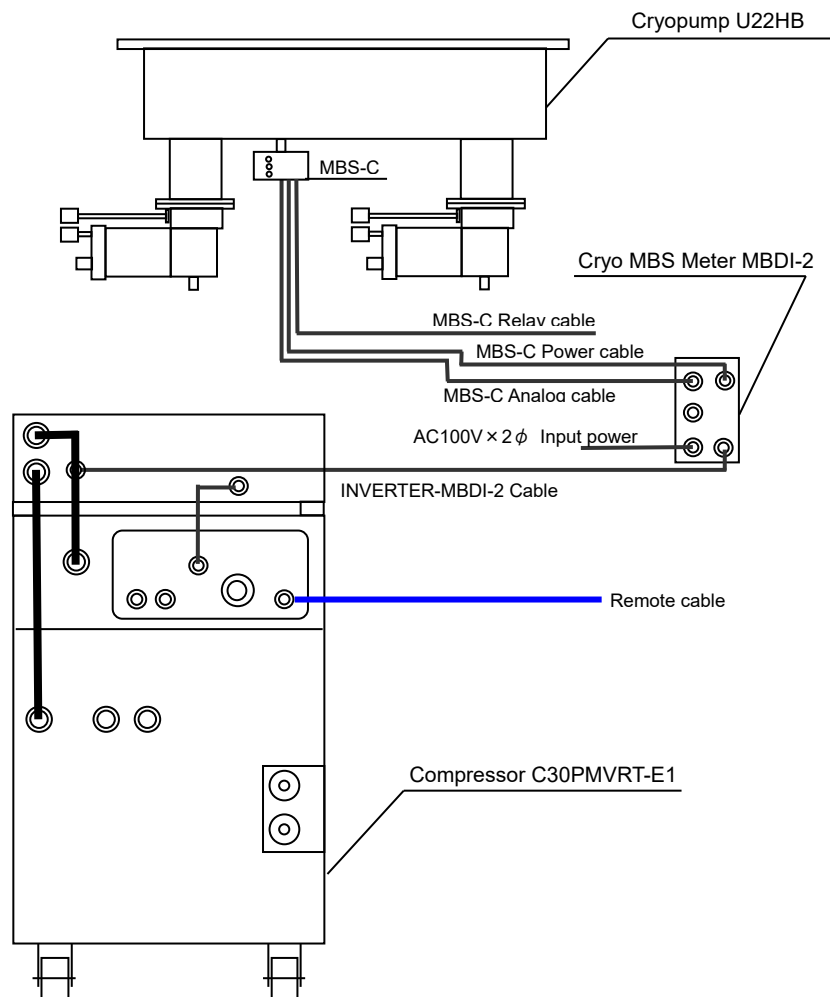


Figure 4-12 Connecting the compressor, MBDI-2, and MBS-C

#### 4.6 Wire routing for compressor and other equipments

The compressor and other equipments must be wired in accordance with applicable local and national standards where the equipments are installed as well as international standards (e.g., NEC/CEC). Signal wires, sequence control wires, and power wires for connecting equipments must be wired in separate conduits to prevent interference during the operation.

In addition, analog wire is sensitive to and susceptible to noise, it must be separated from other wirings in the method above.



**ATTENTION:** The remote wires must not be either put in the same conduit or routed with the power wires. It may cause interference with the compressor operation. Failure to observe this warning may result in damage to and/or break down of the equipment.

If it is impossible to wire in separated conduits, keeping enough distance between those wires can be effective as “separating wires”. Interference between wires depends on electromagnetic force but in general it is effective to keep the distance of 300mm or more between each wiring.

Note: Electromagnetic interference where the C30PMVRT-E1 system, consists of the compressor and the refrigerator, effect to other equipments is not critical, however if the wiring of C30PMVRT-E1 system is not separated from other equipments it may cause interference to sensitive sensor wires, analog wires, and other high impedance wiring of other equipments.



## Section 5. Operation

5.1	Verification of helium static pressure .....	5-1
5.2	Compressor operation .....	5-2
5.3	Inspection after replacing helium circulation components .....	5-4
5.4	Precautions for when compressor is not in operation .....	5-4
5.5	Maintenance operation for a compressor stopped for a long period .....	5-4

### 5.1 Verification of helium static pressure

Before starting cryopump system operation verify the helium static pressure.

Main components that make a system such as a compressor, flexible hoses, and a refrigerator have been charged with helium gas before they are shipped from the factory. However the helium pressure may be changed at the time of connecting the components.

Pressure verification procedure is shown below.

1. Stop the compressor if it is in operation and wait until the whole system has reached to the room temperature (It will take about three hours if the compressor has just been stopped).
2. Ensure that the flexible hoses between the compressor and the refrigerator are connected properly.
3. See Figure 5-1 and check the proper helium filling pressure value at the actual room temperature.
4. Make sure that the helium pressure shown in the high-pressure side pressure gauge on the front panel is in the range of  $\pm 0.04\text{MPaG}$  to the above proper value.  
It is possible to start operating the compressor when the helium filling pressure is in the proper range. If it is out of range, see "Section 7.3 Adjusting system helium pressure" and adjust it.



**ATTENTION:** Improper helium pressure may make the performance unstable, shorten the compressor motor life, and/or cause malfunction of the product.



**ATTENTION:** If the helium filling pressure is higher than the set pressure for the pressure relief valve described in Appendix D, the pressure relief valve of the compressor or refrigerator may vent the surplus helium gas.

If the pressure relief valve blows, stop the operation and leave the compressor for several hours to ensure that the helium filling pressure is in the range which can be still operated. If the helium filling pressure is reduced, please contact us for maintenance.

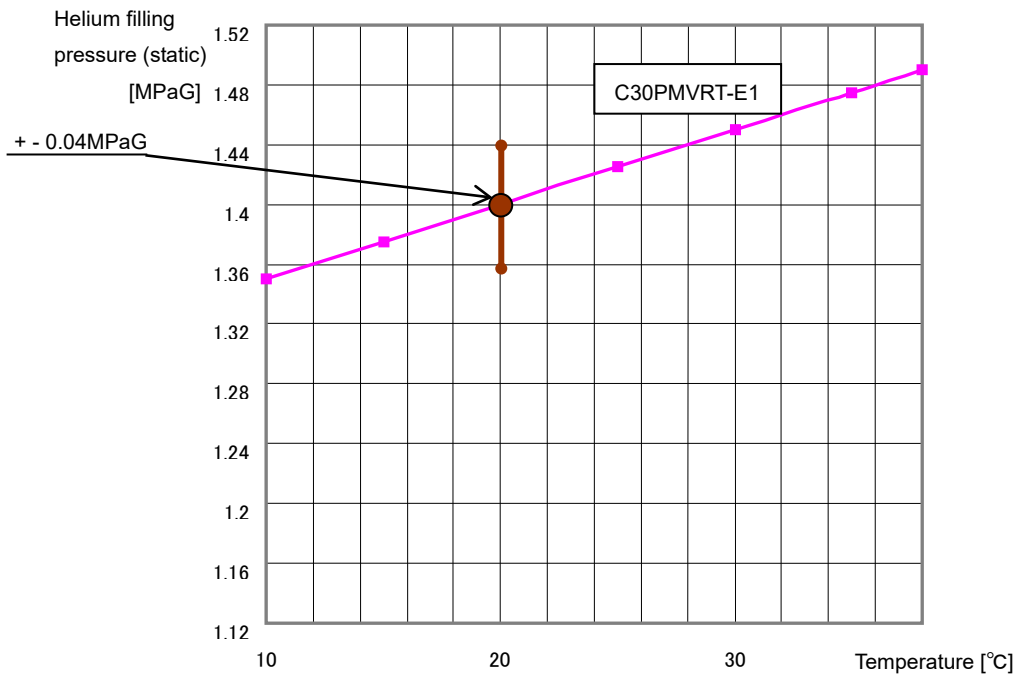


Figure 5-1 Helium static pressure and ambient temperature

## 5.2 Compressor operation

### (1) Supply water to the cooling water piping

Supply water to the cooling water piping. After supplying cooling water, check that the water flow rate and the pressure are in the proper range (See “Section 2.4 Cooling water requirements”).

### (2) Power-On the compressor



**ATTENTION:** Power-On procedure and checking the main power phase sequence must be undertaken by an authorized electrician familiar with the construction and risk of this equipment.

Failure to observe this warning may result in severe bodily injury or fatal accident.

Ensure that the compressor input power cable is connected to the INPUT POWER receptacle. Then turn on the breaker for the compressor inside the distribution panel at the equipment side.

The circuit protector in the compressor chassis is normally turned on; therefore the compressor will be powered on immediately by switching a power supply on the equipment side.

### (3) Checking the main power phase sequence and voltage

If PWR LED and RDY LED indicators light up after a few seconds from power-on, the compressor is ready for operation (See Figure 5-2).

If the buzzer keeps ringing after power-on and all eight STS indicators light up, it means that either the following faults has occurred; reversed phase of the input power cable, open phase or low voltage (See Figure 5-3).

If there is a reversed phase or open phase, rewiring of the input power cable is required. First, turn OFF the breaker for the compressor at the equipment side and cut off the power supply. Then check the order and colors of the wires of the input power cable to ensure that they are wired properly. If they are not correct, rewire them properly.

After the correction, power-on the compressor from the equipment side and check the STS indicators. If all STS indicators light up even though the phase sequence is correct, check if the power supply voltage and input power cable is normal or not.

Besides these statuses described above, if one of the STS indicators lights up and/or the buzzer sound does not stop, refer to “Section 8 Troubleshooting” to solve the problem.



**WARNING:** Hazardous voltage may be present. The checking procedures described above must be undertaken by an authorized electrician familiar with the construction and risk of this equipment.

Failure to observe this warning may result in severe bodily injury or fatal accident.



Figure 5-2 Ready for operation



Figure 5-3 Reversed phase or open phase

#### (4) Operation

Start operation of the compressor by remote function. Refer to “Section 2.6 Remote functions” for operation method by remote function.

#### (5) Operation status display

Figure 5-4 shows a status display during operation. While the compressor is in operation, RUN indicator lights up as well as the appropriate indicator(s) for refrigerator(s) which is in operation.

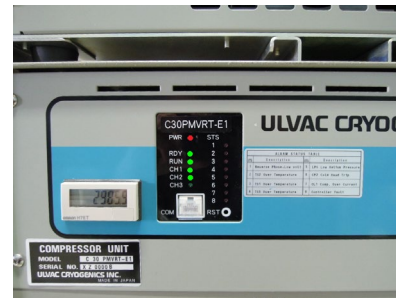


Figure 5-4 Status display during operation

#### (6) Cryopump operation

The cryopump (refrigerator) operation can be started after pumping down the cryopump below 40Pa by a roughing pump (refer to cryopump manual for details). The cryopump condenses and adsorbs the gas molecules on its cryogenically-cooled panels (cryopanel). The compressor operates continuously throughout the cryo process.



**ATTENTION:** The compressor is intended for continuous, not intermittent operation. The number of starting/stopping of the compressor pump must be six or less times per hour. Failure to observe this warning may result in damage to and/or life shortening of the compressor.

### (7) Recording the helium pressure during operation

Helium high-pressure side pressure gauge on the front panel indicates the pressure of the helium supply line of the compressor.

Read the maximum pressure value at the time of starting the compressor operation.

Keep the cryopump system operating and read the pressure value of helium pressure gauge when the system is pumping steadily.

Write down these values in the Appendix A Table A-1, operating log sheet.

These two recorded values depend on the length of flexible hoses and a kind of the refrigerator mounted on the cryopump system. The recorded values are used as reference value for maintenance or replacement of the product explained in the following .

For reference, the helium pressure during operation of C30PMVRT-E1 (R50RT or RM50T x 2) with 3m flexible hoses are shown in Table 5-1.

Table 5-1 Supply line helium pressure during operation

	C30PMVRT-E1 + R50RT(RM50T) Refrigerator
Number of refrigerator units	2
Helium pressure at start-up [MPaG]	Below 2.3
Helium temperature when cryogenically cooled [MPaG]	1.9 - 2.0

### 5.3 Inspection after replacing helium circulation components

After replacing a component such as a cryopump, a flexible hose, and a compressor refer to “Section 5.1 Verification of helium static pressure” and check that the helium filling pressure is almost equal to the value before replacing the component.

In addition, if the system installation condition has been changed, conduct “**Recording the helium pressure during the operation**” described above.

### 5.4 Precautions for when compressor is not in operation

If the temperature of cooling water supplied to the compressor is less than 10°C, stop the water supply after the compressor has been stopped. If cooling water of temperature below 10°C is supplied continuously it may increase viscosity of lubricant oil and cause start up failure of the compressor when the operation command is sent.

Also, if the compressor will be stopped for long period, it is recommended to stop supplying cooling water to avoid corrosion or clogging of the pipes inside the compressor and the heat exchanger. In addition remove the water from the compressor when needed (Refer to “Section 6.1.1 Removal of cooling water piping” to remove the water from the compressor).

### 5.5 Maintenance operation for a compressor stopped for a long period



**ATTENTION:** When the cryopump system is stopped for a long period, operate the compressor for an hour every three months. This will supply lubricant oil inside the compressor to all the components inside. Also, operate the refrigerator for ten minutes at a time every six months.

Failure to observe this precaution may result in damage to the compressor when restarting operation.

NOTE: Circulate cooling water as well during the maintenance operation of the compressor.

## Section 6 Wiring and Piping Removal and Storage

6.1 Removal of wiring and piping and displacement of compressor .....	6-1
6.2 Maintenance in storage .....	6-2

### 6.1 Removal of wiring and piping and displacement of compressor

It is necessary to remove the cooling water piping, helium lines, and electrical wiring before changing the compressor installation place or removing the system.



**ATTENTION:** The following procedure must be undertaken by an authorized electrician and mechanical personnel familiar with the structure and risk of the product. Failure to observe this warning may result in severe bodily injury or fatal accident.



**WARNING:** Just after the operation has been stopped, some parts in the compressor chassis may be hot. Wait at least 15 minutes until it cools down to conduct the work safely. Failure to observe this warning may result in severe bodily injury.

Before starting removing work, ensure that the breaker for the compressor inside the distribution panel at the equipment side is OFF and lock it in the OFF position.

#### 6.1.1 Removal of cooling water piping

Stop supplying cooling water to the compressor.

Drain water out from the compressor before removing the cooling water piping. Also, other than the purpose for removing the cooling water piping, drain water out from the compressor under the conditions listed below.

[Cooling water freezing]: When there is a danger of bursting cooling water piping due to freezing of the cooling water in the compressor.

[Long term halt]: When the cryopump system is stopped for more than a week for holidays or other reasons.

[Transfer]: When relocating the compressor.

#### (Cooling water draining procedure)

The following procedure is available only for an open loop type cooling-water supply system where the water outlet is opened to the atmosphere.

For close loop type cooling-water supply system, it is recommended to additionally install a water drain line diverged from the water return line on the equipment in order to release water pressure in the compressor.

1. Stop supplying cooling water to the compressor unit and stop the water flow.
2. Disconnect the water supply pipe from the "COOLING WATER IN" fitting on the compressor. DO NOT disconnect the water pipe from the "COOLING WATER OUT" fitting. Note that cooling water might drip from the pipe when disconnecting it.

3. Connect a hose for air blowing to the "COOLING WATER IN" fitting.
4. Increase the air pressure inside the hose from 0 to 0.2MPaG. Keep air blowing for more than 30 seconds to blow out the water inside the compressor (The water goes out from the compressor through the water pipe at the "COOLING WATER OUT" fitting).
5. Stop air blowing.
6. Disconnect the hose for air blowing from the "COOLING WATER IN" fitting.
7. When transferring the compressor to other location, disconnect the water pipe from the "COOLING WATER OUT" fitting as well.



**ATTENTION:** Do not perform the removing procedure above when the compressor is turned ON or cooling water is being supplied. Failure to observe this warning may result in severe bodily injury or fatal accident.

### 6.1.2 Disconnecting flexible hoses

To disconnect flexible hoses from the compressor, refer to "Section 4.3 Connecting and disconnecting helium flexible hoses".

Put the dust caps or dust plugs back on the compressor and the removed flexible hoses to keep them in storage.

### 6.1.3 Disconnecting cables

Disconnect the refrigerator cable from the refrigerator. It is not necessary to disconnect the refrigerator cable from the compressor.

Disconnect input-output remote cables from the compressor side.

Disconnect the input power cable from the compressor. Refer to "Section 4.5.1 Connecting the input power cable" and disconnect the cable in reverse order.

### 6.1.4 Transferring the compressor

Unlock the casters of the compressor.

## 6.2 Maintenance in storage

The compressor must be stored in a place indoors and meet the requirements in "Section 1 Table 1-5 Installation environment and operation requirements". Also the storage place chosen must be with good ventilation to avoid suffocation in case of unexpected helium leak.

Place the compressor on a flat floor and lock all the casters.

Remove the piping and wiring from the compressor and put dust caps or dust plugs on the helium line connectors.

Protect the removed components such as flexible hoses and cables with covers or boxes. Store them with the compressor.

Ensure that cooling water has been completely drained out from the compressor.

To store the compressor, cover it with a plastic sheet or package cardboard. Before storing the compressor, write down the value of the helium pressure gauge. Check the value and record it once a month. If the value is clearly decreasing compared to the one before, there is a possibility of helium leakage. Please contact our Service Engineering Division or the nearest customer support center.

## Section 7 Maintenance

- 7.1 Scheduled maintenance ..... 7-1
- 7.2 Replacement of adsorber..... 7-1
- 7.3 Adjusting system helium pressure ..... 7-5
- 7.4 Regular maintenance of helium lines, cooling water piping  
and electrical wiring ..... 7-8
- 7.5 Maintenance parts..... 7-9

### 7.1 Scheduled maintenance

The table below shows the required maintenance on the cryopump system. Refer to the following paragraph for details of adsorber replacement.

For maintenance of refrigerator or other components of the cryopump, see cryopump instruction manual.

Table 7-1 Scheduled maintenance

Item	Maintenance Cycle (h)
Adsorber replacement	Max. 24000h
Refrigerator maintenance	When needed (See cryopump instruction manual.)
Inspection for Helium lines, cooling water lines, and wirings	12000h



**ATTENTION:** Neglecting the scheduled maintenance may shorten the product life, cause damage, and/or destruction of the cryopump system.



**ATTENTION:** If a special maintenance plan for your specific application is needed please consult with our Service Engineering Division or the nearest customer support center.



**ATTENTION:** Refer to “Section 9 Disposal of equipment and component parts” for disposing used components.

### 7.2 Replacement of adsorber



**ATTENTION:** The following replacing procedure must be undertaken by authorized personnel familiar with the structure and risk of the product. Failure to observe this warning may result in severe bodily injury or fatal accident.



**WARNING:** Just after the operation has been stopped, some parts in the compressor chassis may be hot. Wait at least 15 minutes until it cools down to conduct the work safely. Failure to observe this warning may result in severe bodily injury.

Pressure adjustment must be done when the equipments inside the compressor are at the room temperature. Wait about for three hours until it cools down to adjust the pressure.



Follow the steps below to replace adsorber.

1. Ensure that each equipment and device in cryopump system is safe to replace adsorber.
2. Turn off the compressor unit by turning OFF the breaker inside the distribution panel at the equipment side. Lock the breaker in the OFF status for safety reasons.
3. Disconnect the flexible hoses from the "SUPPLY GAS" and "RETURN GAS" connectors at the rear panel of the compressor. Observe the disconnecting requirements below. Refer to "Section 4.3 Connecting and disconnecting helium flexible hoses" for disconnecting method.



**Precautions for disconnecting flexible hoses**

**ATTENTION:** If the flexible hoses are disconnected while the cryopump is still cold, the pressure inside the refrigerator will rise as its inside temperature goes up and cause helium leakage via the pressure relief valve.

**ATTENTION:** To disconnect flexible hose from the connectors, always use two single-ended wrenches (bolt width 26mm, 30mm). Do not use other types.

4. Remove the nuts of the connectors at the rear panel of the compressor with a spanner (Figure 7-1).
5. Remove the seven screws of the rear panel with a proper screw driver and remove the rear panel (Figure 7-2 and 7-3).
6. Disconnect the self-sealing coupling from the adsorber with two spanners. The coupling is connected to the flexible hose above the bottom plate inside the compressor chassis (Figure 7-4). See Figure 7-5 for usage of spanners to disconnect the coupling. Disconnect the coupling quickly to minimize minor helium leakage.
7. Remove the bolts that secure the adsorber to the base of the compressor with the proper spanner (Figure 7-6).
8. Slide the adsorber outward and remove it from the mounting tab on the base of the compressor. And then remove the adsorber from the compressor (Figure 7-7).





Figure 7-1 Remove two nuts from the helium gas connectors



Figure 7-2 Remove all seven screws from the rear panel



Figure 7-3 Remove the rear panel

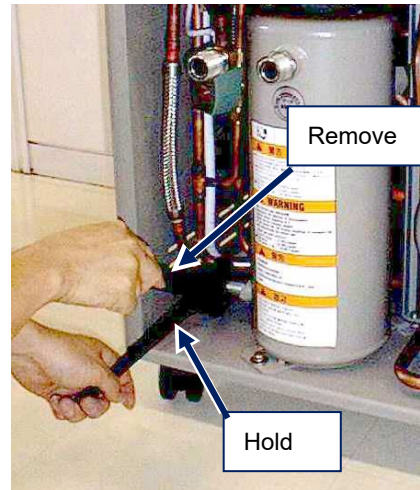


Figure 7-4 Remove self-sealing coupling

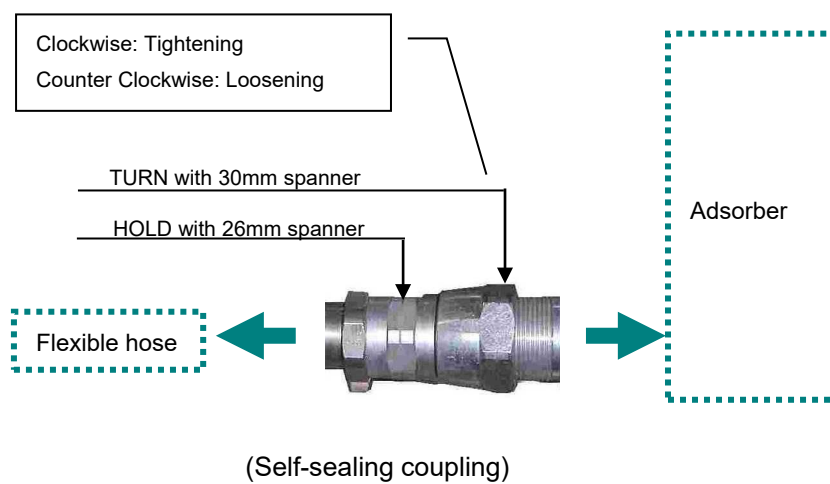


Figure 7-5 Connecting and disconnecting self-sealing coupling with two spanners



Figure 7-6 Remove adsorber mounting bolt



Figure 7-7 Slide adsorber outward

9. Install the replacement adsorber. Remove the two dust caps from the replacement adsorber. Put the adsorber into the compressor so as to place it at the mounting tab on the base of the compressor. Secure the adsorber with the mounting bolt temporarily.
10. Connect self-sealing coupling to the adsorber with the two spanners. Tighten the coupling referring to Figure 7-5. Recommended tightening torque is  $20\text{N} \cdot \text{m}$ . Connect the coupling quickly to minimize helium leakage.
11. Put the rear panel back on the compressor to align the helium connector of the adsorber with the hole of the rear panel and then remove the rear panel again. Fix the adsorber mounting bolt firmly this time.
12. Replace the rear panel and secure it by tightening the seven screws.
13. Put the two removed nuts back on to the "SUPPLY GAS" and "RETURN GAS" connectors at the rear panel of the compressor and tighten each nut using the two spanners supplied.
14. Connect the flexible hoses to the "SUPPLY GAS" and "RETURN GAS" connectors at the rear panel of the compressor. Refer to "Section 4.3 Connecting and disconnecting helium flexible hoses" for connecting method.
15. Check the helium static pressure. Refer to "Section 5.1 Verification of helium static pressure". If the pressure is higher or lower than it should be, adjust it referring to the following "Section 7.3 Adjusting system helium pressure".
16. Record the date and accumulated operation time when the adsorber was replaced in the adsorber replacement record label on the front panel of the compressor. As a guide for the next replacement, it is recommended to make a note of the value that the current accumulated operation time added to the adsorber replacement cycle hours in

Table 7-1.

Refer to “Section 9 Disposal of equipment and component parts” for disposing of used adsorber.

### 7.3 Adjusting system helium pressure

System helium pressure must be adjusted when the compressor is not in operation.

Refer to “Section 5.1 Verification of helium static pressure” for prescribed standard pressure value when the compressor is not in operation.

Prescribed standard pressure value while the compressor is in operation is the value recorded at “Section 5.2 Compressor operation, (7) Recording the helium pressure during the operation”.

If the pressure has changed to by more than 0.04MPaG from the prescribed standard value, follow the procedure below and adjust the system pressure.



**ATTENTION:** All helium circulation components must be connected when adjusting the pressure of the cryopump system.



**ATTENTION:** The following procedure must be undertaken by authorized electrician and mechanical personnel familiar with the construction and risk of this equipment. Failure to observe this warning may result in severe bodily injury or fatal accident.



**WARNING:** Just after the operation has been stopped, some parts in the compressor unit may be hot. Wait at least 15 minutes until it cools down to conduct the work safely. Failure to observe this warning may result in severe bodily injury.

Pressure adjustment must be done when the equipment inside the compressor are at room temperature. Wait for about three hours until it cools down to adjust the pressure.

The following describes how to adjust the helium pressure.

#### (1) Reducing the helium pressure

1. Using an appropriate screw driver, unscrew the six screws at the front panel of the compressor and remove the panel (See Figure 7-8).
2. Open the Helium fill valve inside the compressor slowly by turning its knob counter-clockwise. Allow a slight amount of helium gas to escape.
3. Wait until the helium pressure gauge reads the prescribed standard value described above. When the pressure reaches the standard value, close the valve by turning its knob clockwise.
4. Return the front panel to the compressor with the six screws.

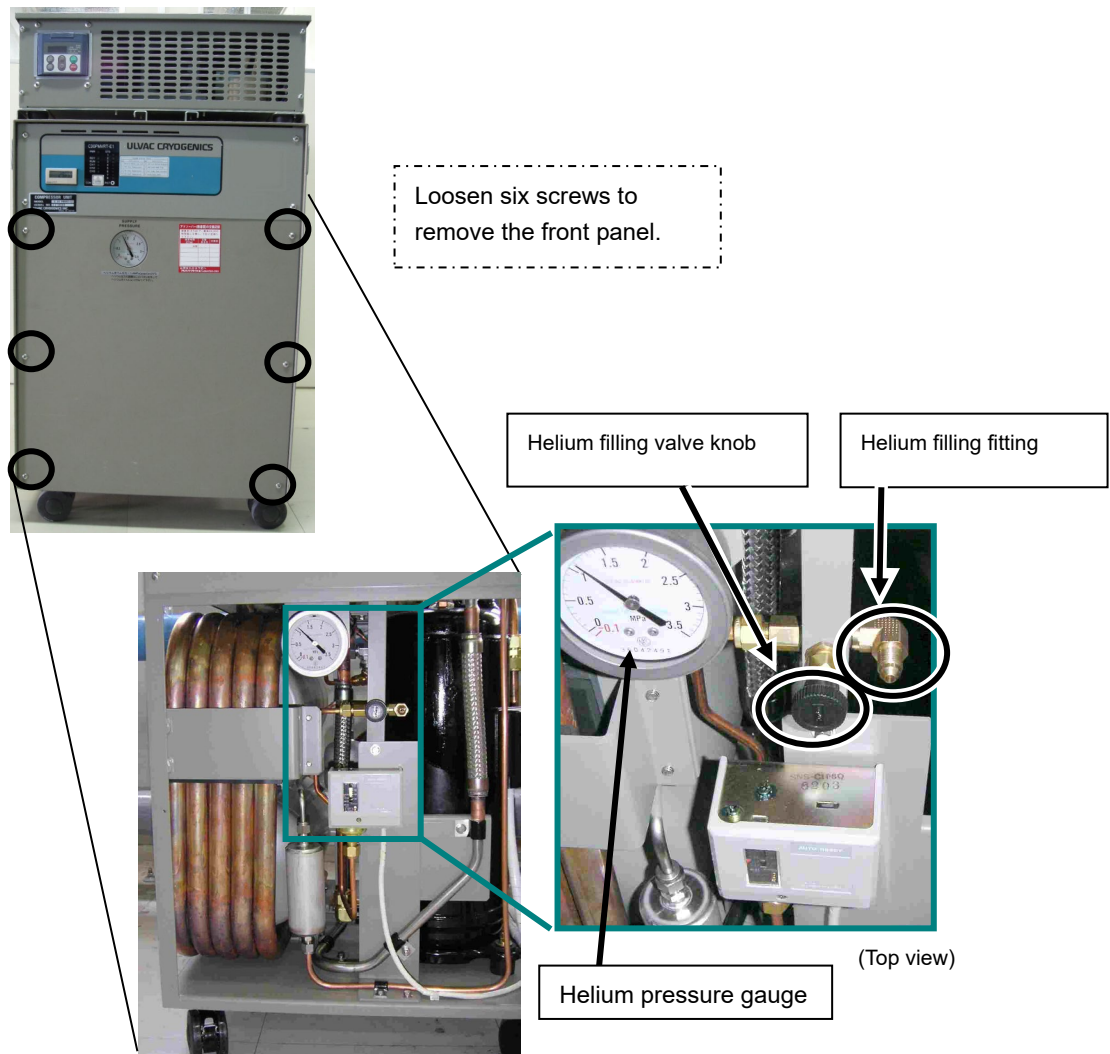


Figure 7-8 Locations of front panel screws and components inside the compressor

## (2) Increasing Helium Pressure

When the helium pressure gauge reads a value lower than the prescribed standard value, adding helium gas is required.

When charging helium or performing helium circuit decontamination, equipments (regulators, charging hoses, adopters, etc.) that can be used at 2.0MPaG or above are required.

Table 7-2 shows items and devices required for adding helium gas.



Table 7-2 Preparation for adding helium gas

Item	Specification
Helium bottle	99.999% pure or above
Pressure regulator	For Helium gas (left-hand screw), 0-20MPaG / 0-6MPaG
Helium charging hose	Terminating in a 1/4 inch female flare fitting



**ATTENTION:** If you need a pressure regulator and/or helium charging hose described in Table 7-2 for adding helium gas, please contact our Service Engineering Division or the nearest customer support center.



**ATTENTION:** Helium gas must be 99.999% pure or more. Using lower purity helium gas may cause deterioration and/or performance degradation of the cryopump system.



**ATTENTION:** If the helium pressure of the cryopump system becomes 0, there is a risk that air or moisture in the air enters the system and contaminates it. If system contamination occurs please contact our Service Engineering Division or the nearest customer support center.

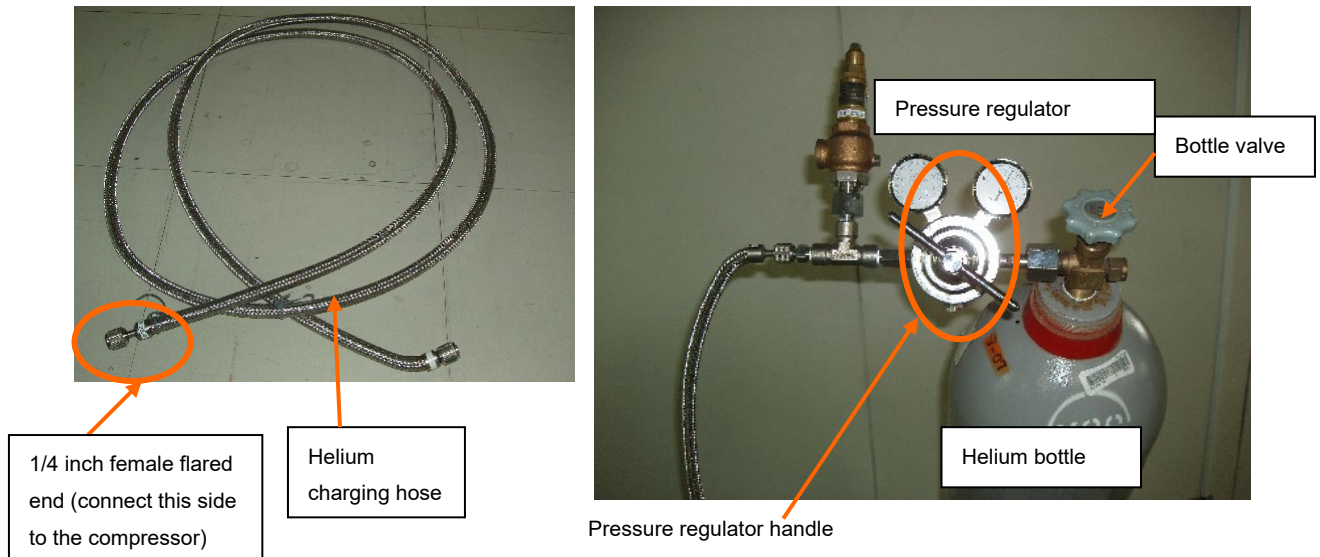


Figure 7-9 Items for adding helium gas to the compressor

### Connecting helium supply line and air purging procedures

1. Remove the front panel of the compressor.
2. Attach the pressure regulator to a helium bottle.
3. Purge the pressure regulator and helium charging hose.
  - 3-1 Turn the pressure regulator handle in clockwise <sup>(\*)</sup> slowly until it becomes hard to turn. Then turn approximately 1/8 to 1/6 more so that the pressure regulator is barely open.
  - 3-2 Slowly open the bottle valve, and confirm the helium gas is flowing out from the pressure regulator exit. After confirming the gas flow, close the pressure regulator by turning its handle counter-clockwise and then connect the helium charging hose to the pressure regulator.

3-3 Turn the handle clockwise again and confirm the lower side pressure gauge indicates 0.1MPaG to 0.2MPaG. At this time, helium gas is flowing out from the flared fitting of the charging hose. Allow helium gas to flow for 30 seconds to purge the charging hose of air.

(\*1) In general, a pressure regulator opens by turning its handle clockwise.

4. Purge the helium filling fitting of the compressor and connect the charging hose.
  - 4-1 While doing the procedure in 3-3, open the helium filling valve slightly (turn it counter-clockwise). Allow a small amount helium gas to flow through the helium filling valve and the helium filling fitting to purge the air between them.
  - 4-2 Connect the 1/4 inch female flare end of the charging hose to the helium filling fitting of the compressor while the helium gas flows out from both the helium filling fitting and the charging hose.
  - 4-3 After connecting them, close the helium filling valve by turning its knob clockwise.

#### Filling helium gas to the compressor

1. Turn the pressure regulator handle attached to the helium bottle clockwise and adjust the pressure that the lower side pressure gauge indicates 2MPaG.
2. Open the helium filling valve by turning its knob slowly counter-clockwise. At the same time monitor the value indicated on the helium pressure gauge of the compressor goes up slowly.
3. When the helium pressure reached the prescribed standard value, close the helium filling valve by turning its knob clockwise.
4. Confirm that the valve is closed firmly. Turn the handle of the pressure regulator in counter-clockwise to stop the gas flow. Then disconnect the charging hose from the helium filling fitting of the compressor.
5. Return the front panel of the compressor unit to the original position.

#### 7.4 Regular maintenance of helium lines, cooling water piping and electrical wiring

Conduct inspection on helium lines, cooling water piping and electrical wiring every 12000 hours.

Inspect connection parts of helium lines and cooling water piping for evidence of leakage. Also check that there is no damage in these plumbing.



**ATTENTION:** The following procedure must be undertaken by an authorized electrician familiar with the structure and risk of the product. Failure to observe this warning may result in severe bodily injury or fatal accident.

For electrical wiring, inspect the refrigerator cable of the compressor and remote input-output cable to ensure that they are connected firmly. At the inspection, turn off the compressor unit by turning OFF the breaker on the distribution panel at the equipment side. Lock the breaker at OFF status for safety reason. Disconnect the input power cable from the compressor.

## 7.5 Maintenance parts

Table 7-3 shows parts that need replacement during maintenance. Replace them when needed referring the replacing cycle in the table.

Table 7-3 Maintenance parts

Parts	Type <sup>(*)</sup>	Replacing cycle
Adsorber	S	Max. 24000h
Gasket for helium coupling	U	When it is damaged or becomes dirty.
Cooling fan for inverter	U	When it is locked by malfunction
<sup>(*)</sup> Maintenance type S: Scheduled U: Unscheduled		



**ATTENTION:** For more information on planning a maintenance, purchasing maintenance parts, diagnosis, and servicing, please contact our Service Engineering Division or the nearest customer support center.

This page intentionally left blank.




## Section 8 Troubleshooting

8.1 Problem types ..... 8-1  
 8.2 Troubleshooting procedures ..... 8-2  
 8.3 Alarm code descriptions..... 8-4


### 8.1 Problem types

C30PMVRT-E1 compressor indicates the state of warning or breakdown with a buzzer sound and STS indicators. When protective function of the inverter is activated, alarm information will be displayed on the inverter touch panel. (For alarm information details please refer to inverter user’s manual.



**ATTENTION:** When a problem occurs, check the status of STS indicators. Also, make sure that the power-supply voltage, cooling water flow rate and its temperature, helium gas pressure, input power cable connections, and the remote cable connections are all in an appropriate state.

There are eight indicators called “STS” at the front panel of the compressor. Please refer to Figure 8-1 for the alarm types of warnings and faults (The alarm status code table shown in Figure 8-2 is labeled on the compressor body) .



**ATTENTION:** Ensure that all the operation command of the compressor is OFF while trouble shooting the compressor.

ALARM STATUS TABLE					
	STS	Description		STS	Description
1 ● 2 ● 3 ● 4 ● 5 ● 6 ● 7 ● 8 ●	1	Reverse Phase, Open Phase, Low Volt	1 ○ 2 ○ 3 ○ 4 ○ 5 ● 6 ● 7 ● 8 ●	5	LPS Low Helium Pressure
1 ○ 2 ● 3 ● 4 ● 5 ● 6 ● 7 ● 8 ●	2	TS2 Over Temperature	1 ○ 2 ○ 3 ○ 4 ○ 5 ○ 6 ● 7 ● 8 ●	6	CP2 Cold Head Trip
1 ○ 2 ○ 3 ● 4 ● 5 ● 6 ● 7 ● 8 ●	3	TS1 Over Temperature	1 ○ 2 ○ 3 ○ 4 ○ 5 ○ 6 ○ 7 ● 8 ●	7	OL1 Comp. Over Current
1 ○ 2 ○ 3 ○ 4 ● 5 ● 6 ● 7 ● 8 ●	4	TS3 Over Temperature	1 ○ 2 ○ 3 ○ 4 ○ 5 ○ 6 ○ 7 ○ 8 ●	8	Controller Fault

●→lit up      ○→off

Figure 8-1 Alarm status table

ALARM STATUS TABLE			
STS	Description	STS	Description
1	Reverse Phase, Low Volt	5	LPS Low Helium Pressure
2	TS2 Over Temperature	6	CP2 Cold Head Trip
3	TS1 Over Temperature	7	OL1 Comp. Over Current
4	TS3 Over Temperature	8	Controller Fault

Figure 8-2 Alarm status code table

## 8.2 Troubleshooting procedures

### 1. Troubles occurred before operation

Table 8-1 List of troubleshooting before operation

Problem	status	Possible cause	Corrective action
In power OFF state, Elapsed Time Meter display is dark.	Value indication is too pale to read or OFF.	Battery for Elapsed Time Meter went low (Battery life: more than 6 years).	Replace the Elapsed Time Meter. Call for servicing*.
“PWR” indicator does not light up.	Power failure	Input power voltage is lower than rated voltage, or open phase (S-T).	Check power supply and correct it.
	Power failure or CP1 malfunction.	CP1 protector trip.	Turn CP1 ON. If it trips again call for servicing*.
	Failure of power supply (DC24V) inside controller.	Blown fuse or power supply failure.	Call for servicing*.
“RDY” indicator is OFF.	“STS” indicators indicate ALARM status and buzzer activated.	Does not meet requirements to start operation or there is a failure.	See detailed alarm codes in the following section (8.3) and take corrective action.
“PWR” indicator and/or “STS” indicator blinks.	“STS” indicators indicate ALARM status and buzzer activated.	Input power voltage reduction, open phase, or equipment failure.	Check input power cable, breaker and power supply at equipment side. If there is no problem with either, call for servicing*.
Both “RDY” and “STS” indicators do not light up.	Compressor needs reset.	Abnormal behavior of compressor caused by power failure or other reasons.	Push “RST” button or Call for servicing*.
Inverter touch panel does not light up.	Inverter power failure.	CP1 protector trip.	Turn CP1 ON. If it trips again call for servicing*.
	Inverter failure.	Inverter malfunction.	Call for servicing*.

※If the problem is not solved, please contact our Service Engineering Division or the nearest customer support center.

## 2. Troubles during operation

Table 8-2 List of troubleshooting during operation

Problem	Status	Possible cause	Corrective action
“RDY” indicator is ON but remote operation cannot be performed.	Remote signal fault.	Remote input-output cable is not connected or connection of output signal from the equipment is wrong.	Correct pin number of output signal from the equipment and connect remote input- output cables properly.
Operation command is sent but compressor pump does not start up.	Both “RDY” and “RUN” indicators light up.	Compressor motor fault or disconnection of motor wiring.	Call for servicing*.
“RUN” indicator is ON but refrigerator is not running.	CH1 and CH2 indicators remain OFF.	Fault or improper connections of remote input-output cables.	If commands from the equipment side are correct, check remote input-output cables and their connection.
	CH1 and CH2 indicators are ON.	Too many impurities in helium gas.	Refer to cryopump manual.
		Power-supply voltage is too low.	Set power-supply voltage within the available range.
		Relay fault inside Controller or fault such as refrigerator cable disconnection.	Call for servicing*. Replace the refrigerator cable.
“RDY” indicator went OFF and the compressor stopped running.	“STS” indicators light up and buzzer sounds.	Interlock is activated.	See detailed alarm codes in the following section (8.3) and take corrective action.
After a short electric power interruption, compressor does not start again.	After a short electric power interruption, operation does not restart.	“Alternate operating mode” does not have restart function for short power interruption.	“Momentary operating mode” enables the compressor to restart if the electric power recovers within 2 seconds after interruption. If this function is required, change the operation mode by modification of remote wiring. Refer to Section 2 and Section 4.
	After power is interrupted for longer than 2 seconds, compressor does not start operation.	Longer electric power interruption than set time (2 seconds).	Compressor needs restart manually.

Table 8-2 List of troubleshooting during operation  
(Continued from previous page)

Operation frequency of compressor motor does not change.	Compressor operates at 60Hz even when the temperature of the cryopump is 20K or lower.	The inverter is not receiving a contact from the temperature display MBDI-2.	Check the setting of the temperature display. If no problem is found, call for servicing.
	Compressor operates at 50Hz or 40Hz when the temperature of the cryopump is 20K and higher.	The inverter is receiving contacts from the temperature display MBDI-2.	Check the setting of the temperature display. If no problem is found, call for servicing.

※ If the problem is not solved, please contact our Service Engineering Division or the nearest customer support center.



**ATTENTION:** Troubleshooting procedures described above must be undertaken by an authorized electrician or mechanical personnel familiar with the structures and the risks of the compressor and its related components. To ensure safe, reliable system performance, read this manual as well as other relevant manuals completely to gain thorough understanding before beginning work.

When a compressor does not need power supply to follow the procedure, shut down the power of the compressor and lock it in the OFF status. Failure to observe this warning may result in severe bodily injury or fatal accident.

### 8.3 Alarm code descriptions

<Alarm status>

● → lit up    ○ → off

#### STS

- 1 ●
- 2 ●
- 3 ●
- 4 ●
- 5 ●
- 6 ●
- 7 ●
- 8 ●

#### Reverse Phase, Open Phase, Low Volt

##### (Reverse phase, open Phase, or low voltage)

When the state of the compressor main power supply corresponds to following either and the state continues 3 seconds or more, all LED indicators light up.

1. Reverse phase
2. Open phase
3. Low voltage (in case of nominal 170V or less)

When a voltage drop arises at the time of starting, a compressor stops immediately, however the alarm is not turned on. It is because the voltage value returns to normal, shortly after stopping. In this case, a start and a stop might be repeated.

Check and make sure that the line voltages (R-S, S-T, and T-R) of the power cable are within the rated value. If these voltages are within the rated value and all indicators are light up, there is a possibility of reverse phase. Check the wiring of the main power supply referring to "Section 5.2 (3) Checking the main power phase sequence and voltage".

If the input power supply voltage is low, check the input power line and the user's power supply that has distributed electric power to the compressor.

When there is an open phase(s), all indicators should be blinked or turned off.

- 1 ○ **TS2 Over Temperature (Over temperature)**  
 2 ● TS2 monitors the temperature of the compressor pump. If TS2 is activated it  
 3 ● means the compressor pump is in an unrecoverable abnormal condition. Please  
 4 ● contact our Service Engineering Division or the nearest customer support center  
 5 ● immediately.  
 6 ●  
 7 ●  
 8 ●
- 1 ○ **TS1 Over Temperature (Over temperature)**  
 2 ○ TS1 monitors the temperature of the helium supply line. If TS1 is activated it  
 3 ● means the compressor is in an unrecoverable abnormal condition. Please contact  
 4 ● our Service Engineering Division or the nearest customer support center  
 5 ● immediately.  
 6 ●  
 7 ●  
 8 ●
- 1 ○ **TS3 Over Temperature (Over temperature)**  
 2 ○ This temperature switch is activated when cooling water does not meet the  
 3 ○ requirements and/or cooling water lines are not connected properly. Refer to  
 4 ● “Section 2.4 Cooling water requirements” and ensure that the temperature and flow  
 5 ● rate of cooling water are appropriate for the compressor specification. If they are  
 6 ● not appropriate correct them to within the proper range. Wait 15 minutes for the  
 7 ● temperature switch to recover and then push the “RST” button to clear the alarm.  
 8 ●
- 1 ○ **LPS Low Helium Pressure (Reduction of helium pressure)**  
 2 ○ This pressure switch monitors the pressure reduction in the helium return line.  
 3 ○ When there is helium leakage or the helium filling pressure is lower than the preset  
 4 ○ value, the switch will operate (The set pressure of this switch is  $0.1 \pm 0.02$ MPaG).  
 5 ● Check the connections of the flexible hoses and the helium filling pressure referring  
 6 ● to “Section 4.3 Connecting and disconnecting helium flexible hoses” and “Section  
 7 ● 5.1 Verification of helium static pressure”. If the alarm is not cleared by the  
 8 ● procedures above, please contact our Service Engineering Division or the nearest  
 customer support center immediately.
- 1 ○ **CP2 Cold Head Trip (Overcurrent of refrigerator)**  
 2 ○ When this alarm lights up, it means there is an over current in the refrigerator motor  
 3 ○ circuit and the circuit protector (CP2) has been activated.  
 4 ○ Turn OFF the compressor and check the compressor side, refrigerator cable, and  
 5 ○ refrigerator motor for evidence of earth fault or short circuit.  
 6 ● If there is an earth fault or short circuit in the parts above or no identified cause,  
 7 ● Please contact our Service Engineering Division or the nearest customer support  
 8 ● center.

- 1 ○ **OL1 Comp. Over Current (Overcurrent or open phase of compressor)**  
2 ○ This alarm is activated when OL1 detects an over current or open phase in the  
3 ○ compressor motor.  
4 ○ Check that the helium pressure is not higher than the set value on the helium  
5 ○ pressure gauge. Refer to “Section 5.1 Verification of helium static pressure” for  
6 ○ helium pressure set value and “Appendix C C30PMVRT-E1 compressor electrical  
7 ● circuit” for OL1 set value.  
8 ● Turn OFF the power of the compressor for at least 5 minutes and then turn it ON  
again to clear the alarm. If the problem is not solved, please contact our Service  
Engineering Division or the nearest customer support center.
- 1 ○ **Controller Fault (Controller fault)**  
2 ○ A control module constantly checks the hardware to maintain safe operation. When a  
3 ○ component fault occurs in a part such as a magnetic contact (MC) during operation, this  
4 ○ alarm is activated. Loose wiring in the controller could be a cause of the alarm also.  
5 ○ Please contact our Service Engineering Division or the nearest customer support  
6 ○ center for replacement and adjustment of the controller.  
7 ○  
8 ●
- 1 ○ **Other (Status whereby both RDY and STS indicators are OFF)**  
2 ○ In normal operation, RDY indicators light up and STS indicators are off. If both  
3 ○ RDY and STS indicators are OFF, it means there is a fault other than those listed  
4 ○ above. If the indicator shows the same status after pushing “RST” button and  
5 ○ turning OFF and ON the power of the compressor, please contact our Service  
6 ○ Engineering Division or the nearest customer support center for replacement and  
7 ○ adjustment of the controller immediately.  
8 ○

**Appendix A Operating log**

Table A-1 Operating log

CRYOPUMP S/N					<b>CRYO-U® OPERATING LOG</b>			POWER    V ×    ϕ					
COMPRESSOR S/N								Temperature			Pressure	Remarks	
REFRIGERATOR S/N													Cryopump
Measuring condition					Compressor unit				Temperature		Pressure	Remarks	
Date	Time	Measurer	Room temp. [°C]	Humidity [%]	ETM	High pressure helium gas [MPaG]	Current [A]	Cooling water flow rate [L/min(*)]	1 <sup>st</sup> stage	2 <sup>nd</sup> stage			【Pa】
									K thermocouple	MBS-C	H <sub>2</sub> /P etc		

(\* ) Measure cooling water flow rate with flow meters for each compressor unit.

This page intentionally left blank.



## Appendix B Combination of C30PMVRT-E1 Compressor and Cryopumps

Table B-1 Combination of C30PMVRT-E1 compressor and cryopumps

Cryopump Specifications				Maximum number of refrigerator that can be connected to single compress
Cryopump Model	Size (inch)	Refrigerator		
		Model	Unit	
U22HB	22	R50RT	2	2
U22WB	22	RM50T	2	2

This page intentionally left blank.

## Appendix C C30PMVRT-E1 Schematic Diagram

Schematic diagrams of the C30PMVRT-E1 compressor unit are shown in Figure C-1. Controller setting and connections are shown in Table C-1.

Table C-1 Controller setting and connections

Figure	Model	OL1 set point	Refrigerator		
			Cable	Connector	Max. quantity
C-1	C30PMVRT-E1	28A	For 3 phase drive (UC2800-009-16)	For 3 phase drive Compressor side: NJC-204-RF Cable side: NJC-204-PM (Nanaboshi product)	2

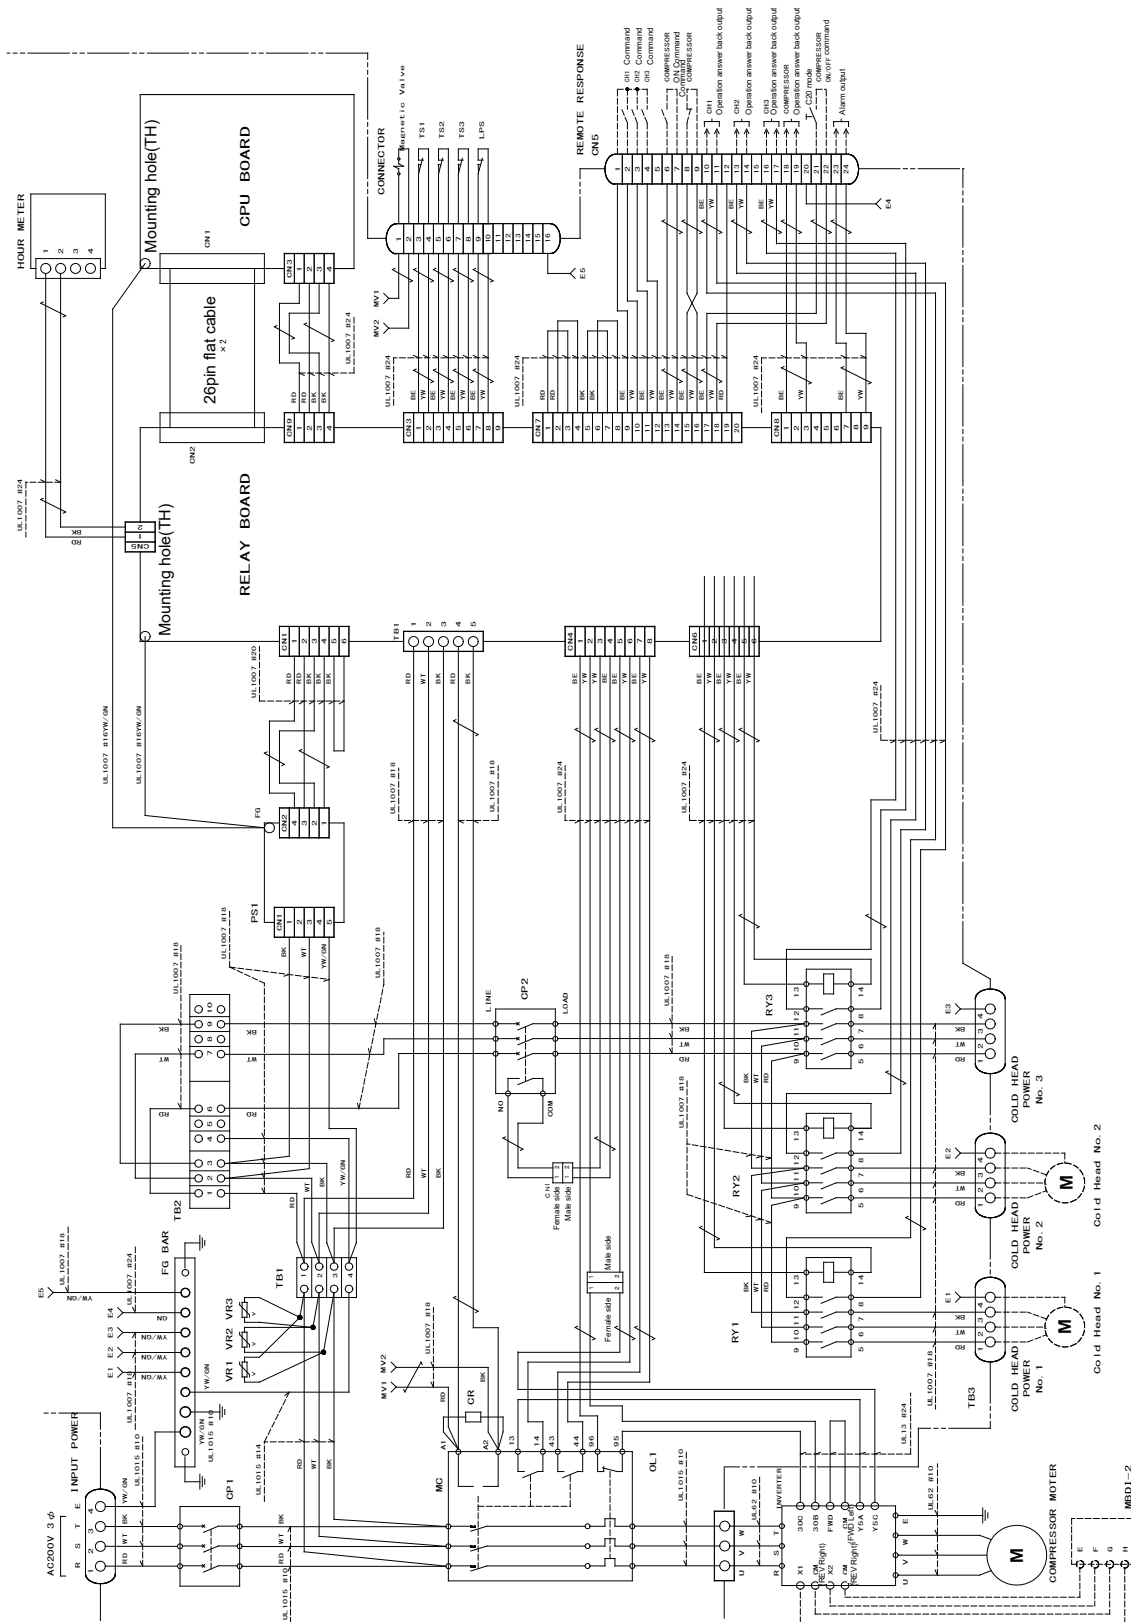


Figure C-1 C30PMVRT Schematic Diagram

## Appendix D Compressor Flow Diagram

Low pressure helium gas returning from the refrigerator unit enters the compressor. Lubricant oil is injected into the compressor with the low pressure helium; the gas containing the oil is then compressed by the compressor pump turning it into high temperature high pressure helium gas. Most of the lubricant oil returns to droplet form and is separated within the compressor. This lubricant oil is pooled at the bottom and lubricates the inside of the compressor. It follows the circulating system where it comes out from the compressor and cooled down at an oil heat exchanger before being injected back into the compressor through an oil injection filter.

High temperature high pressure helium gas comes out from the compressor, passes through a water cooled helium heat exchanger for removal of compression-caused heat. It is cooled to an ambient temperature and then enters an oil separator. In here, the oil is separated and the droplets of separated oil pass through an oil return filter and oil return orifice before joining the low pressure helium gas and being returned to the compressor. High pressure helium gas comes out from the oil separator enters an adsorber where oil-mist is adsorbed and removed. The Helium gas comes out the adsorber passes through a flexible hose and is supplied to the refrigerator unit.

### ◆ Compressor safety devices

Name	Function	Specification
Pressure relief valve ※1	Located on the helium supply line and releases gas automatically when pressure exceeds the set value.	Set pressure : 2.85MPaG
Differential pressure regulating valve	Located on the line connecting helium supply and return lines and automatically keeps the high - low differential pressure under the set value.	Set pressure : 1.74MPa

※1 The set pressure of pressure relief valve at the refrigerator is 1.9MPaG. Please note that the refrigerator pressure relief valve releases gas before the compressor pressure relief valve in actual system.

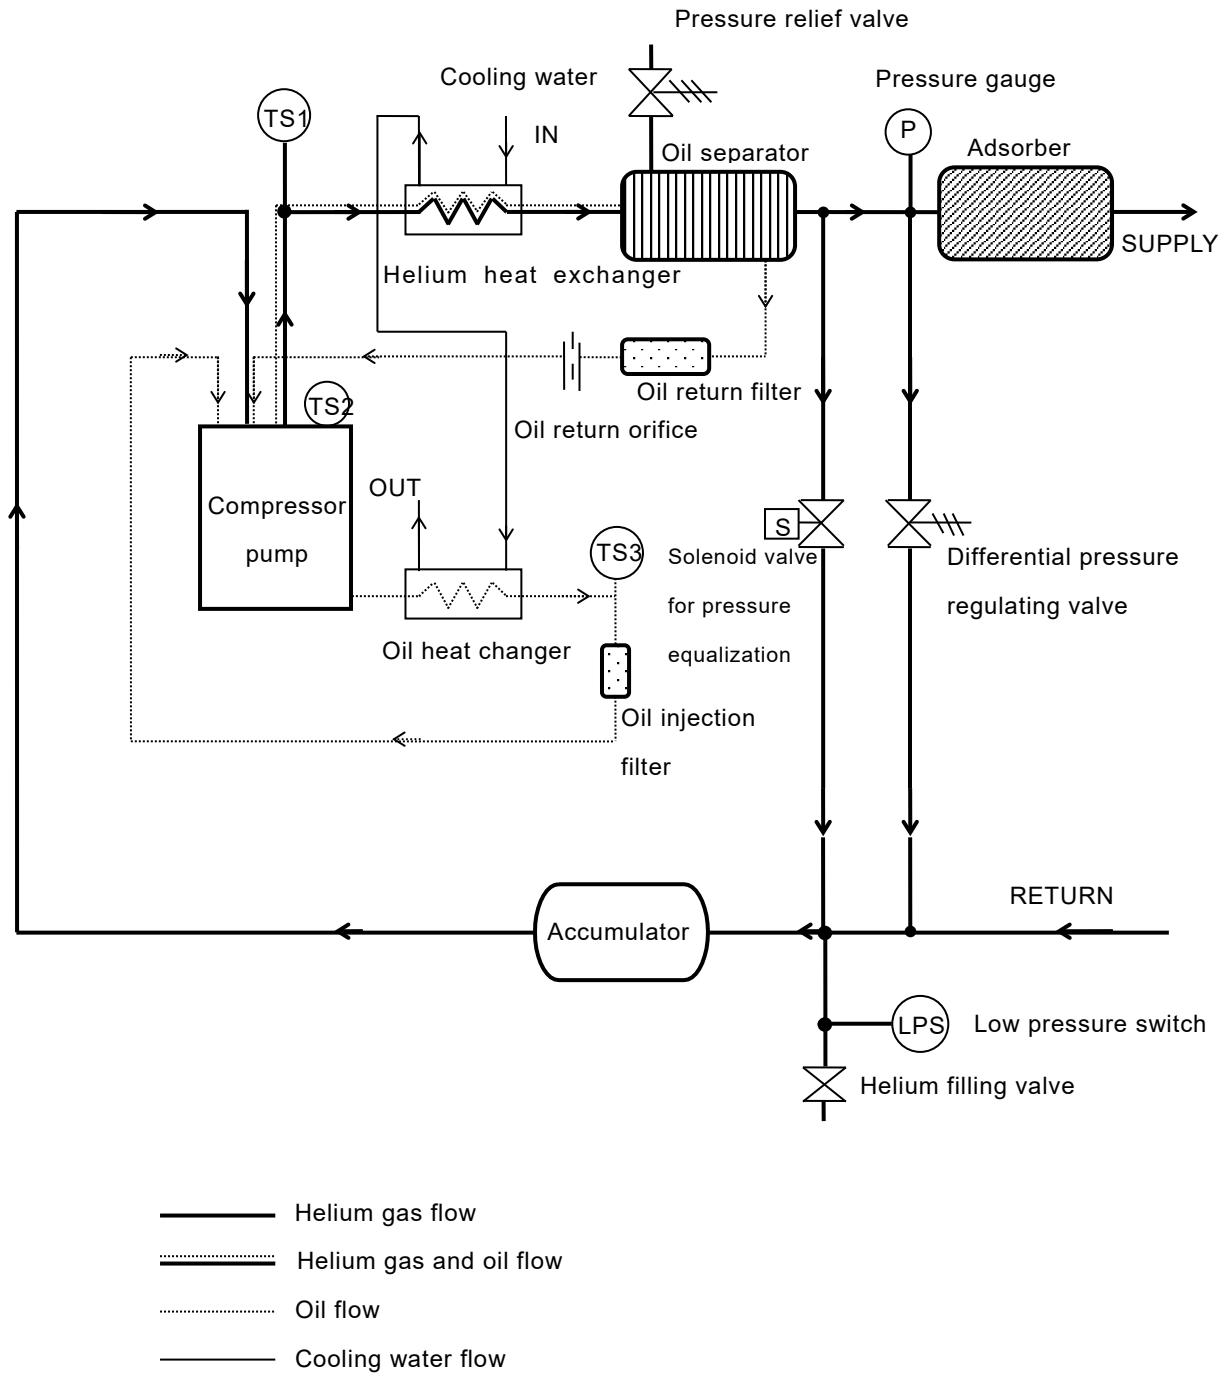


Figure D-1 Compressor flow diagram

---

## SERVICE NETWORK

- For technical support, servicing or additional contact information, visit us at [www.ulvac-cryo.com](http://www.ulvac-cryo.com).

ULVAC CRYOGENICS INC.

[www.ulvac-cryo.com](http://www.ulvac-cryo.com)

1222-1 Yabata, Chigasaki, Kanagawa 253-0085, Japan

<Sales>

Tel: +81-467-85-8884

<Service Engineering Division>

Tel: +81-467-85-9366

Fax: +81-467-83-4838

ULVAC CRYOGENICS KOREA INC.

[www.ulvac-cryo.co.kr](http://www.ulvac-cryo.co.kr)

107, Hyeongoksandan-ro, Cheongbuk-Myeon, Pyeongtaek-si,  
Gyeonggi-Do, Korea, 17812

Tel: +82-31-683-2926

Fax: +82-31-683-2956

ULVAC CRYOGENICS (NINGBO) INC.

[www.ulvac-cryo.com](http://www.ulvac-cryo.com)

No.888 Tonghui Road, Jiangbei District, Ningbo, China, 315020

Tel: +86-574-879-03322

Fax: +86-574-879-10707

This page intentionally left blank.



### Revision History

Date	Revision No.	Contents
2012-05-18	2012.05	First edition.
2013-03-26	2013MH01	<p>“Safety Instructions” No.3 and No.5 have been revised.</p> <p>“SERVICE NETWORK” has been revised.</p>
2013-12-17	2013DR02	<p>P.1-1 Table1-1 “C30PMVRT-E1 Compressor model” has been changed.</p> <p>“Introduction” and “SERVICE NETWORK” has been revised.</p>
2015-11-13	2015NR03	<p>“Safety Instructions” has been revised.</p> <p>Section 1.</p> <p>Table 1-1 has been modified.</p> <p>“1.7 Cryopump installation” has been modified.</p> <p>Section 2</p> <p>Table 2-5 has been modified.</p> <p>Section 5</p> <p>Table 5-1 has been modified</p> <p>Section 7</p> <p>“7.3 Adjusting system helium pressure” has been modified.</p> <p>Appendix B</p> <p>Table B-1 has been modified.</p> <p>“Service Network” has been revised.</p>
2023-08-04	2023AT04	<p>“Safety Instructions” Description on the sealing sticker has been added.</p>
2023-11-08	2023NR05	<p>“Safety Instructions” Description on the adsorber disposal has been modified.</p> <p>Section 3-3 A note has been added to flexible hose allowable pressure.</p> <p>Appendix D has been modified.</p>

This page intentionally left blank.