




RTC-700A Tablet Software Uninstall/install Procedure Manual


1. Remove the micro SD card from the Tablet.
 - ① Remove the micro SD card from the micro SD card slot of the Tablet.
2. Deleting the old *.apk data and copying the new one to the micro SD card.
 - ① Connect a card reader to the PC.
 - ② Insert the micro SD card into the card reader, delete the old *.apk file, and copy the new *.apk file.




3. Uninstall the application.

- ① Make the Tablet and HELIOT communicate.
- ② Press [MENU] > [Settings] > [Display/Messages] > [ANDROID/ date and time] (red square).
- ③ It will be the ANDROID Setting screen.
- ④ Select the Apps (red square) in the Setting (left screen below). The screen in the middle will appear. Select "Leak Detector" or "HELIOT900" (blue square). The Apps screen will appear. Select Uninstall (green square). The pop-up will show the message "This application will be uninstalled." Select "OK" (yellow square).

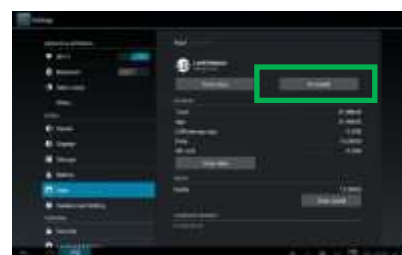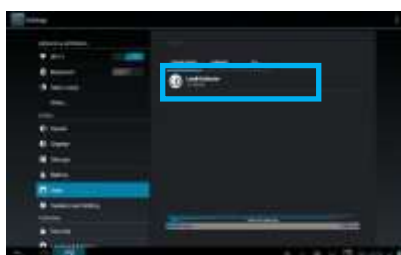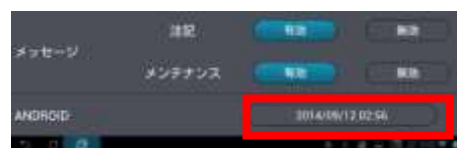

- ⑤ After the uninstallation is complete, the Apps screen will appear. Select the  button in the middle at the left bottom of the screen to move to the ANDROID HOME screen.

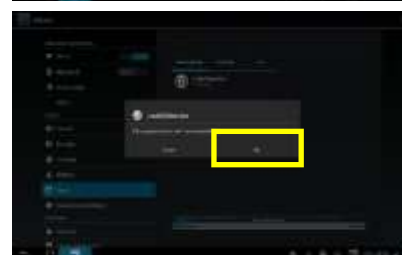


4. Insert the micro SD card into the Tablet.
 - ① Insert the micro SD card into the micro SD card slot of the tablet until it clicks into place.



5. Install the application.


- ① Select "File Manager" (red square) on the ANDROID HOME screen, and then select "MicroSD" (blue square) in the My Storage.

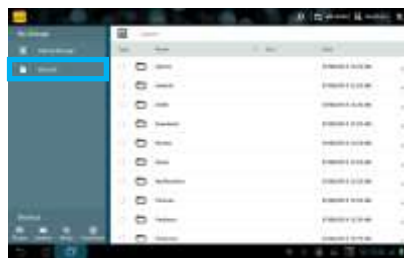


- ② Under "MicroSD", scroll down to select "LeakDetector_Ver**.apk" (red square).




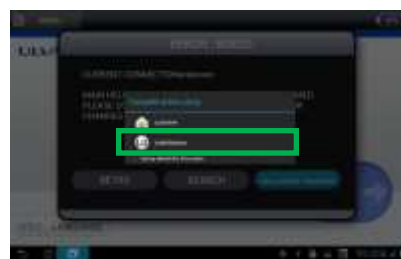
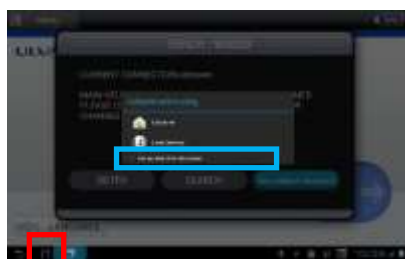
- ③ The "LeakDetector" installation screen will appear. Select "Install."

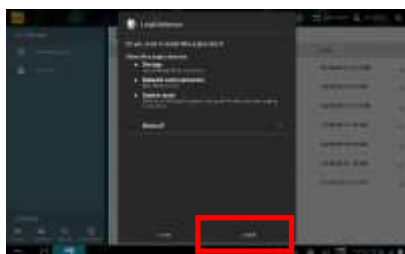

- ④ When the installation is complete, press "Open" to go to the HELIOT initial screen.

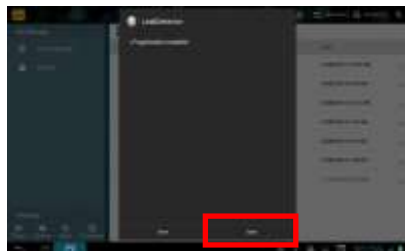


- ⑤ Select  button (red square). The "Complete action using" window will pop up. Check (☒) "Use by default for this action" (blue square) and select "LeakDetector" (green square).



- ⑥ Select the  button and flick all the startup files except for Leak Detector to close them.

- ⑦ Connect the USB cable to the Tablet, the pop-up window (left picture below) will appear. Check ☒ "Use by default for this USB device" (red square), and then select "OK" (blue square).

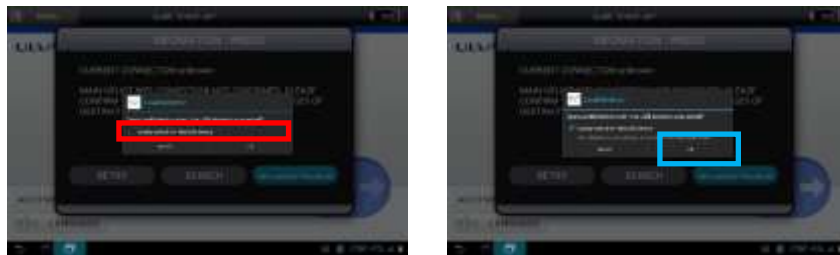

This completes the installation and settings.